



CREATOR

 
31075



LEGO.com/creator





WARNING: CHOKING HAZARD. Toy contains small parts and a small ball. Not for children under 3 years.


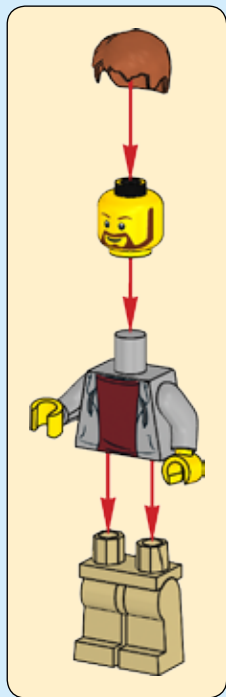




1

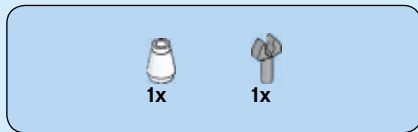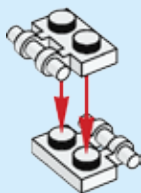  

2

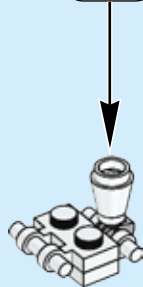  



1x



1x



 
1x




1x

3


1



2

 

3

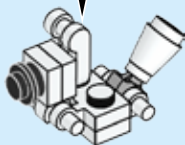 


4



4x

 4

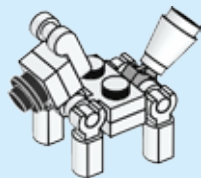




1


1




 2

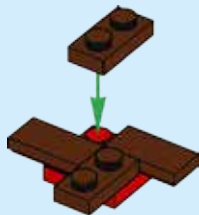

3

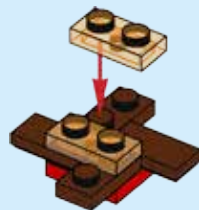 

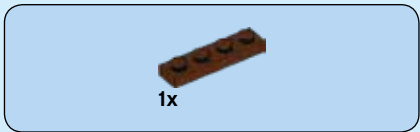 


1x

1



 
6

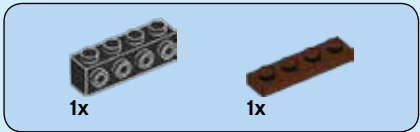


1x


1x

  2

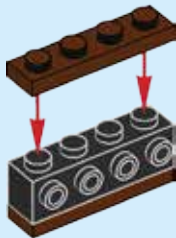


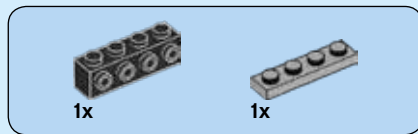


3

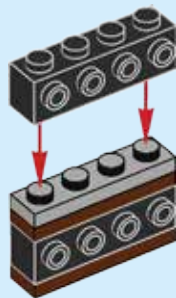 


4

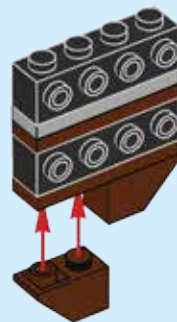 

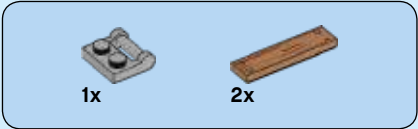 


5

 




6



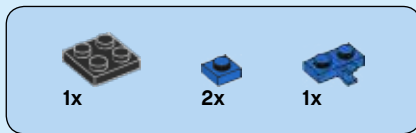 


7

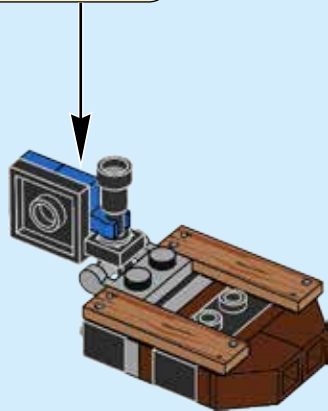 

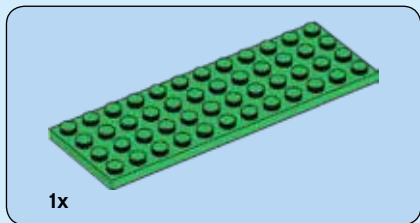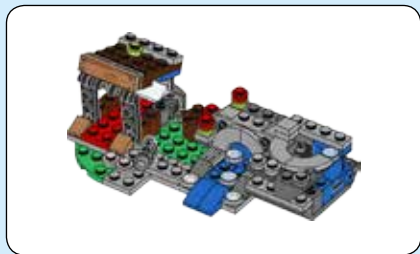  


1

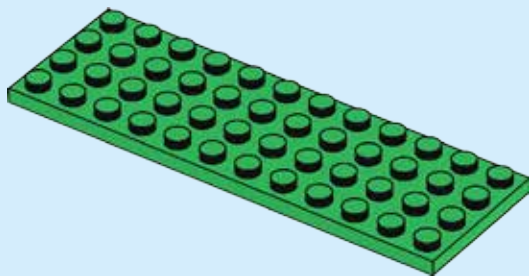 




2

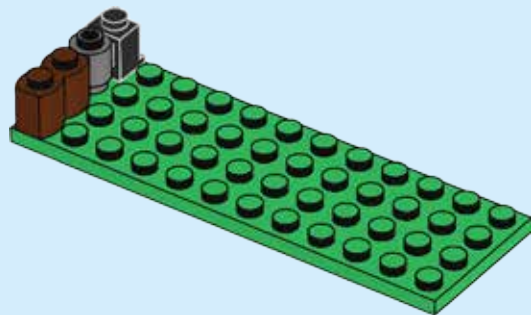 


3

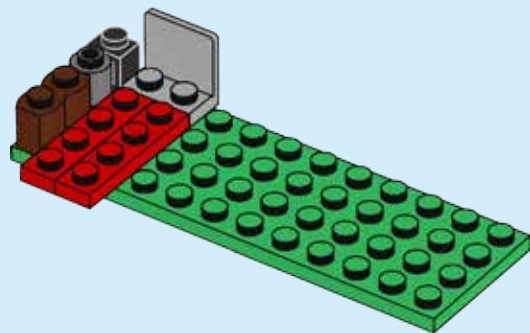 




4

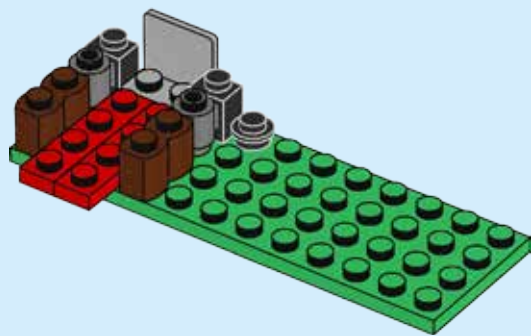 




1x

 5

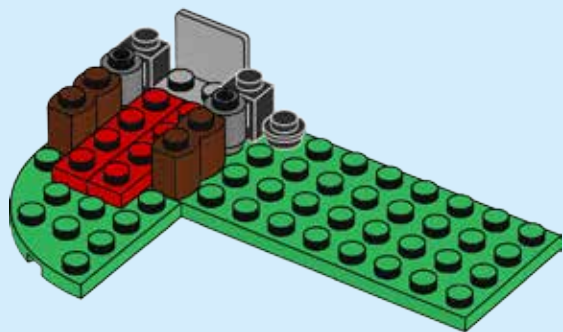

2x

 
6

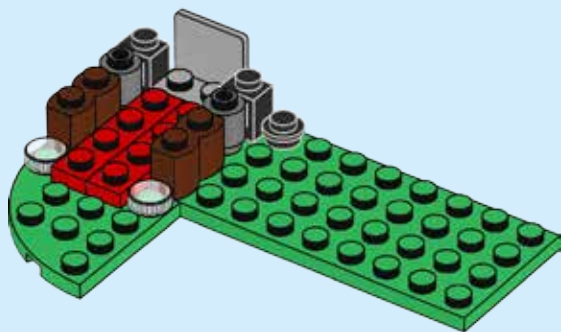



1x

 7

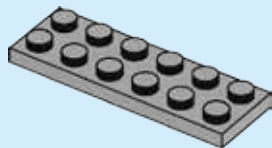



2x





2x

  8

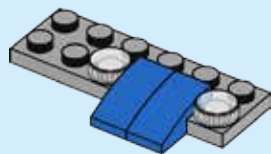


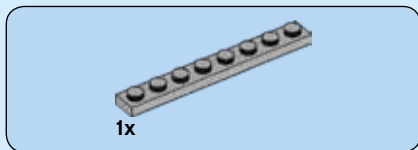


9

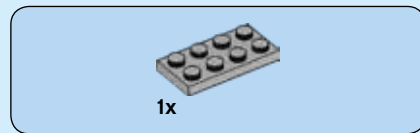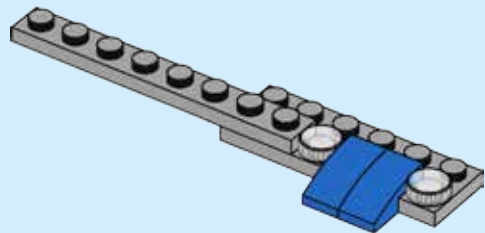  

10


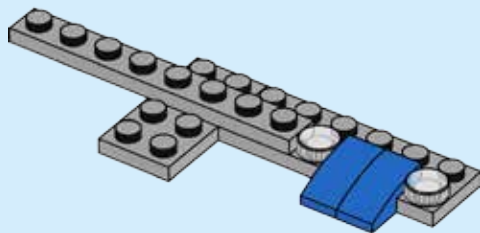 


11

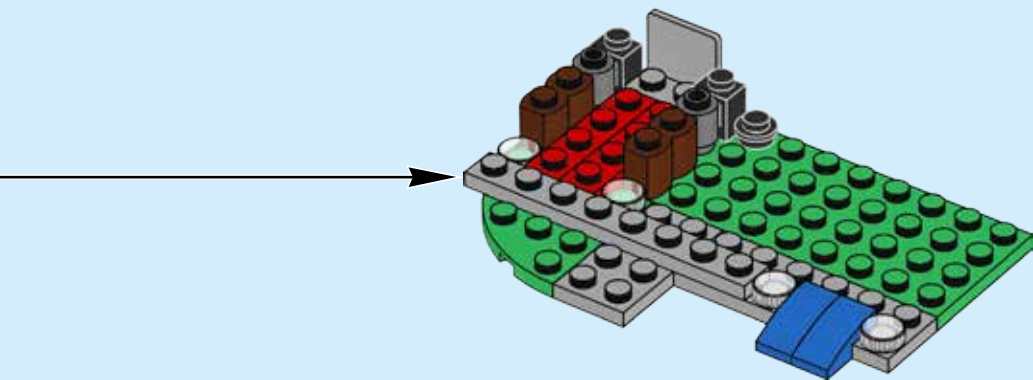 




12

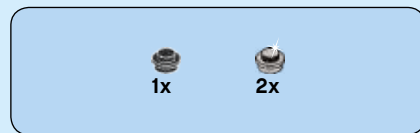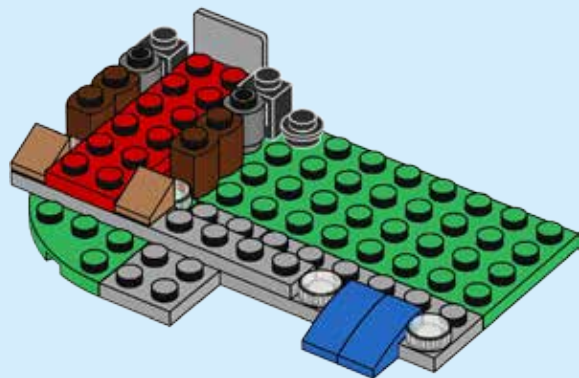  

13

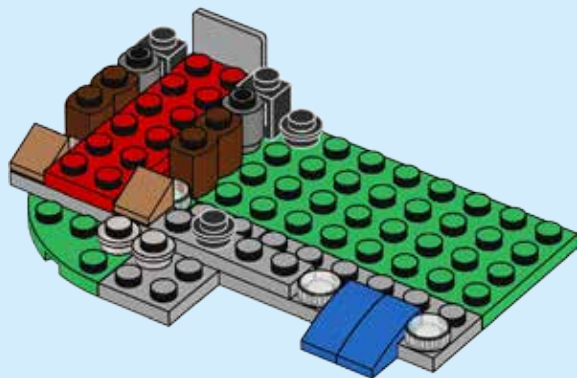 




1x



1x

 14

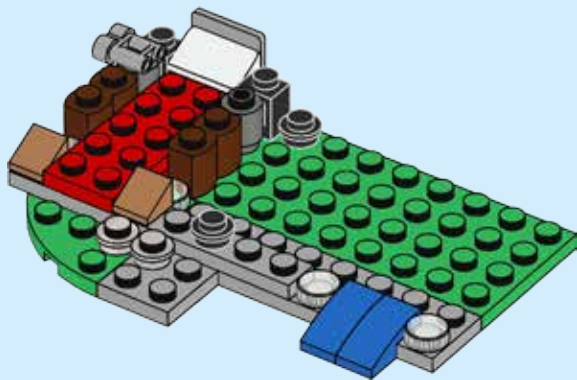




1x



1x

 
17

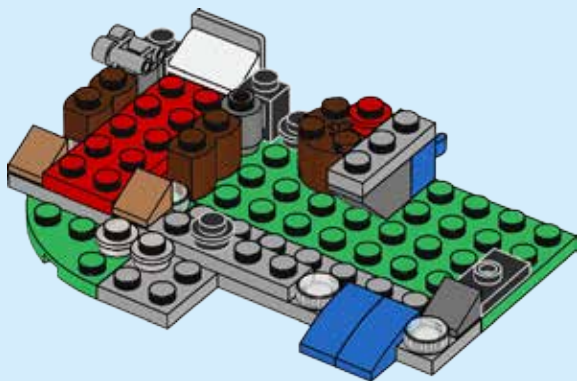



3x

 18

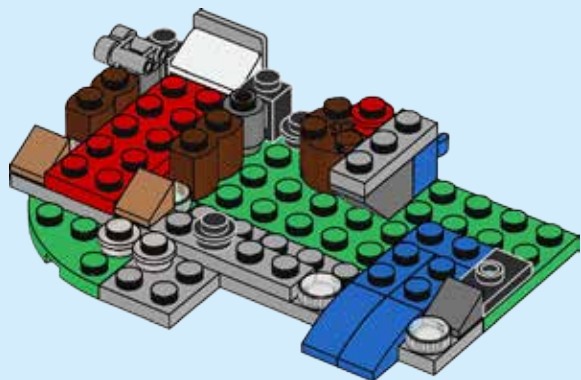


1x



1x

 19

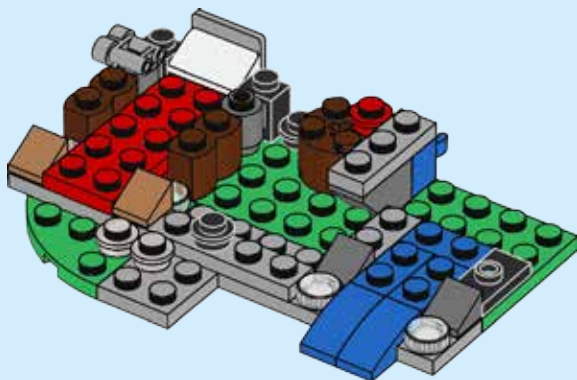





2x




2x

  20

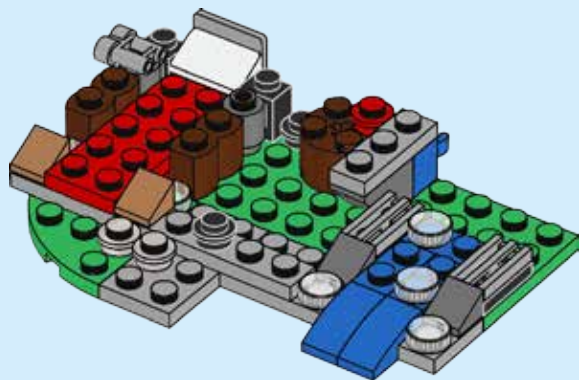


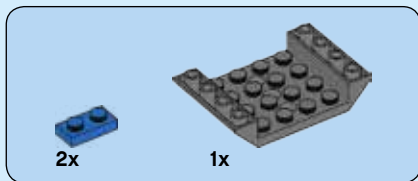


21

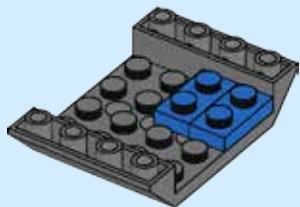 


22

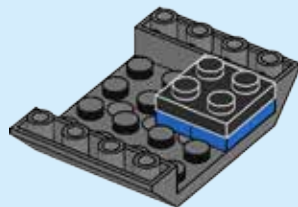 


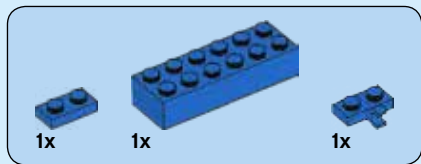 




23

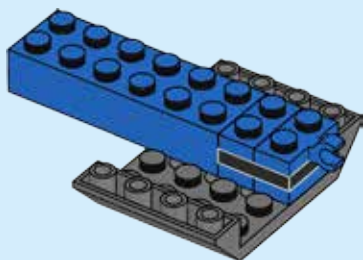 


24

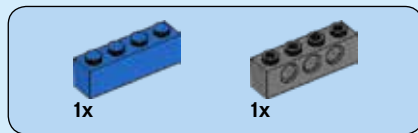 


24

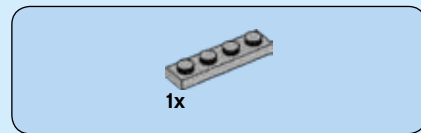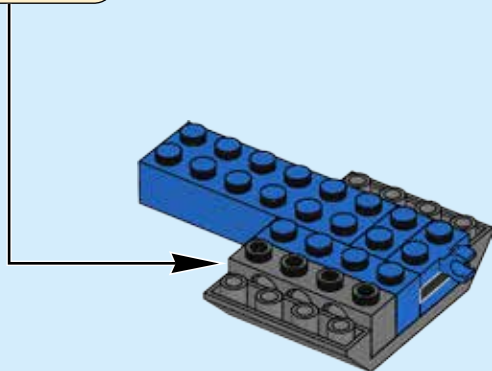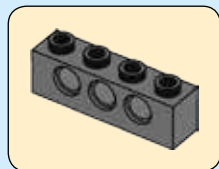   


25

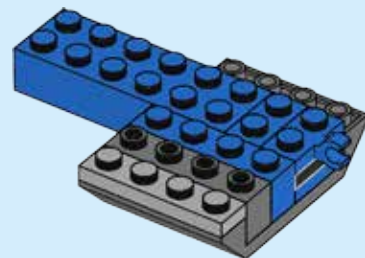 


26

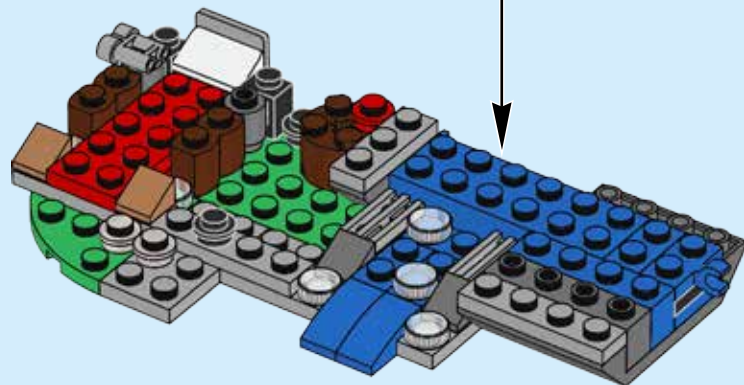 

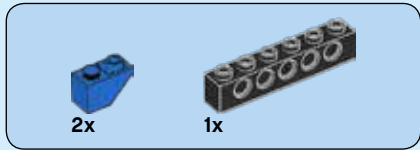 

27

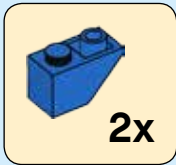 




1x



1x

 
28

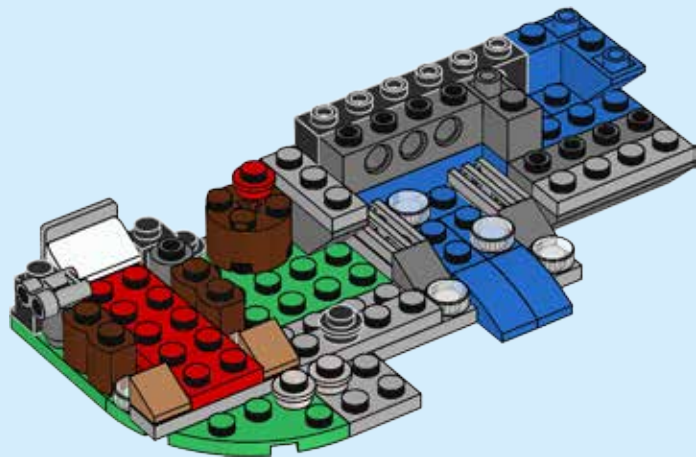





2x

  29

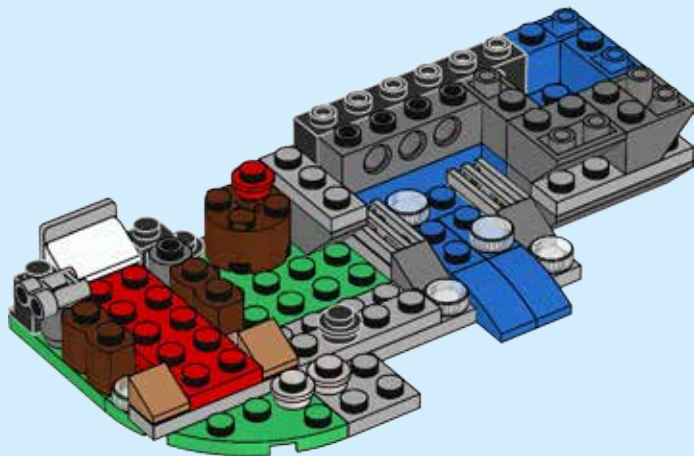

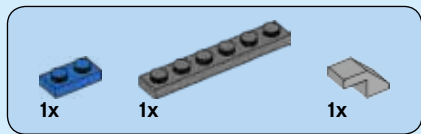

30

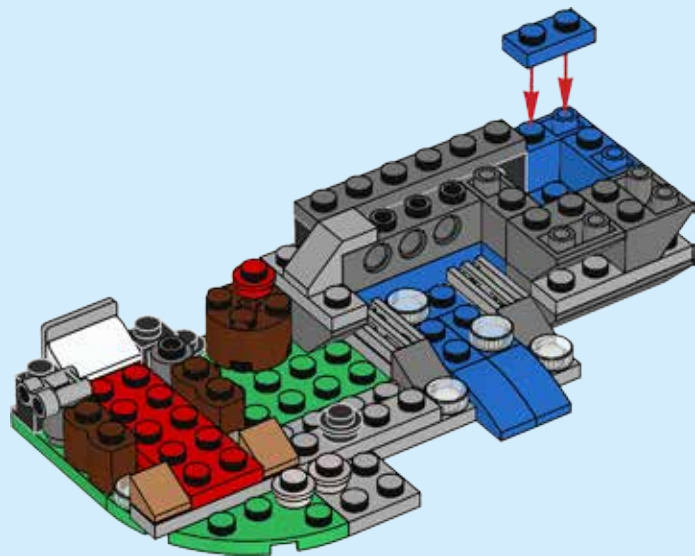 



1x

 


1x



2x

31

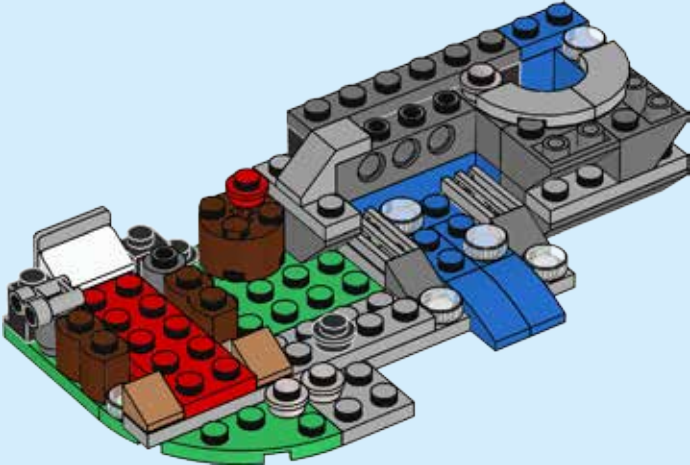




1x



1x

 32

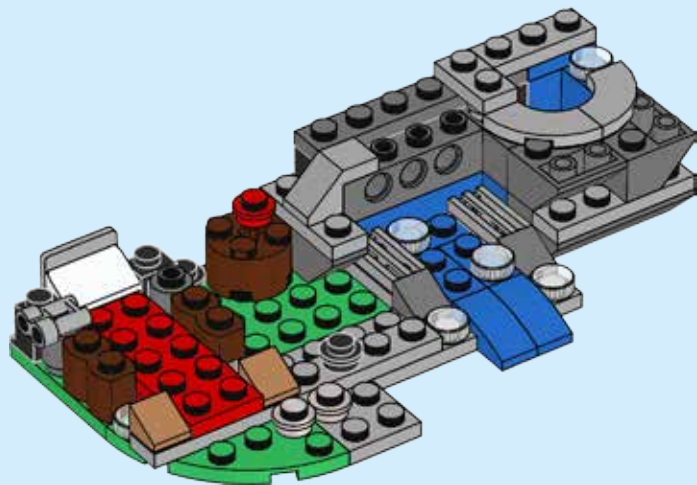




1x



1x

 
33

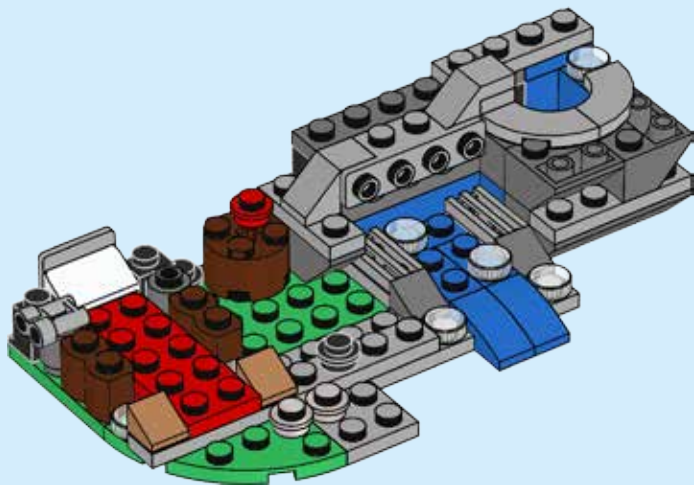



3x

 
34

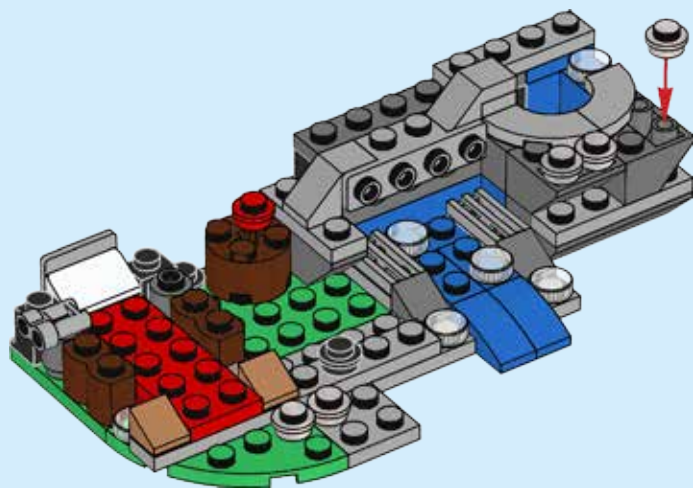



2x

 35

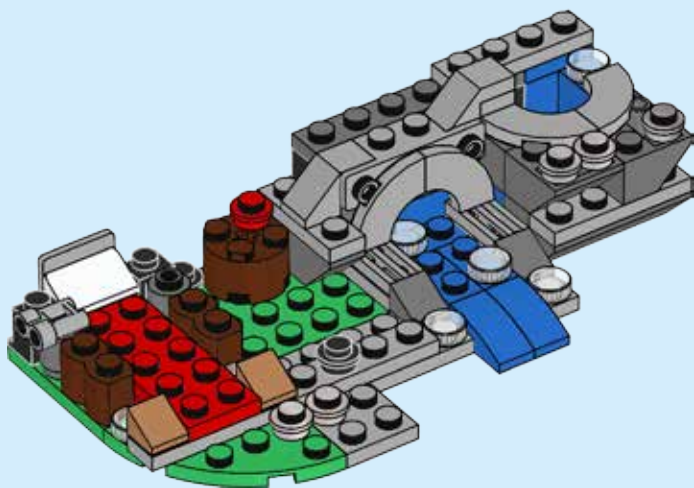




2x



2x

 36

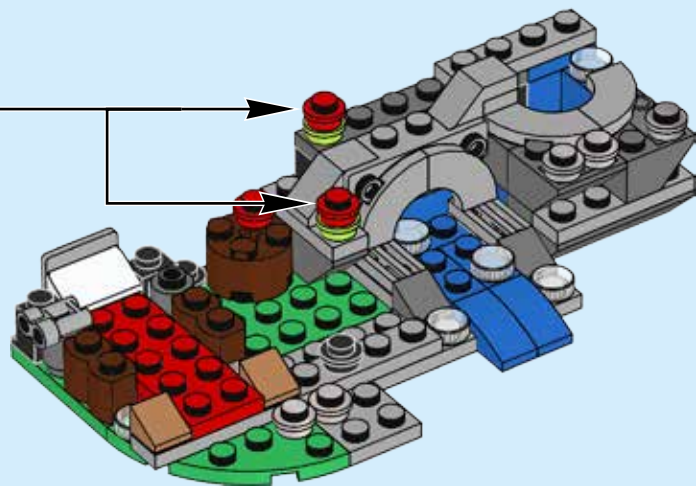



1x



1x



1x

37

 
1

 


2





3

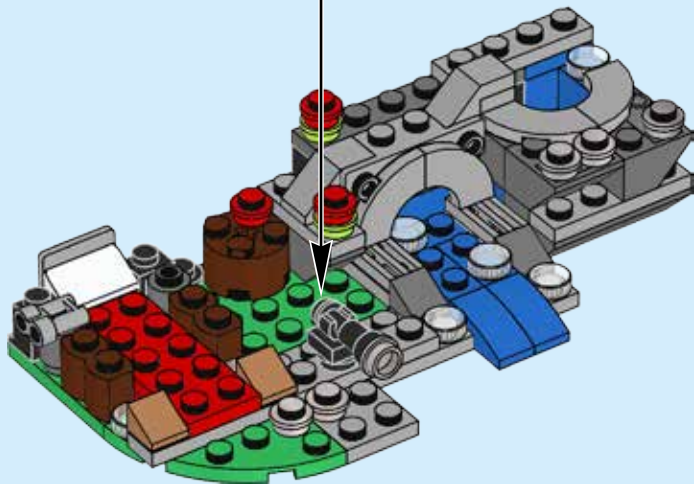




1x

 
 
38

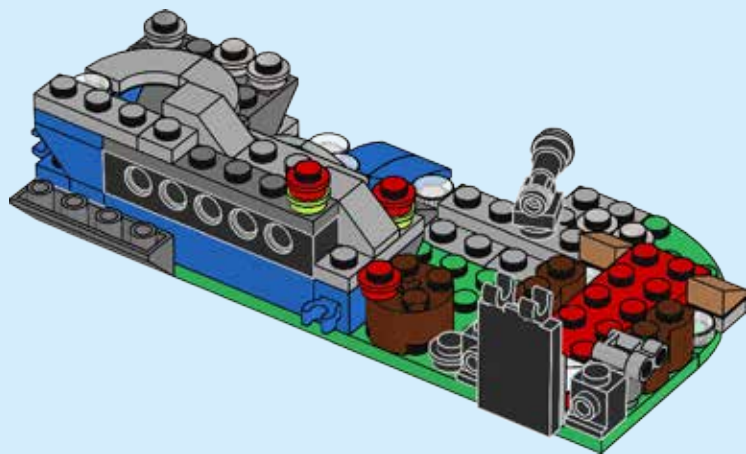

38

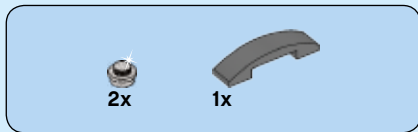 

39

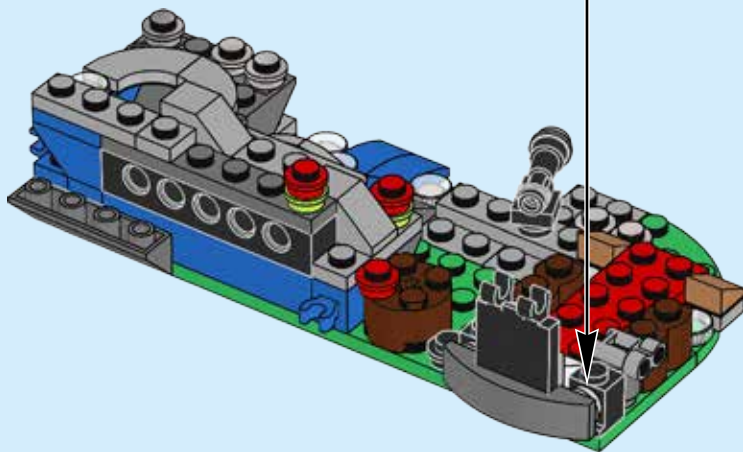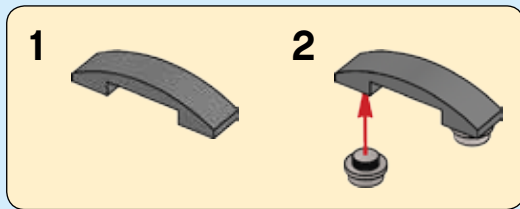  



1x



40



40



2x



1x

41





1x

42



1x



1x

 
43





2x

44

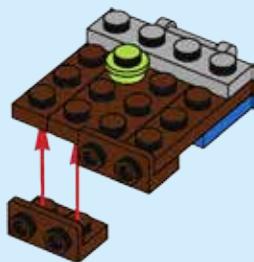

42

 
 


1x





2x

45

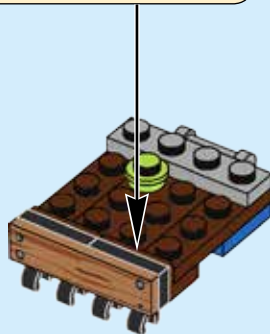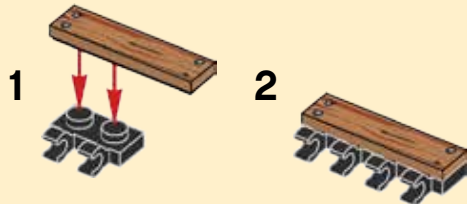


46

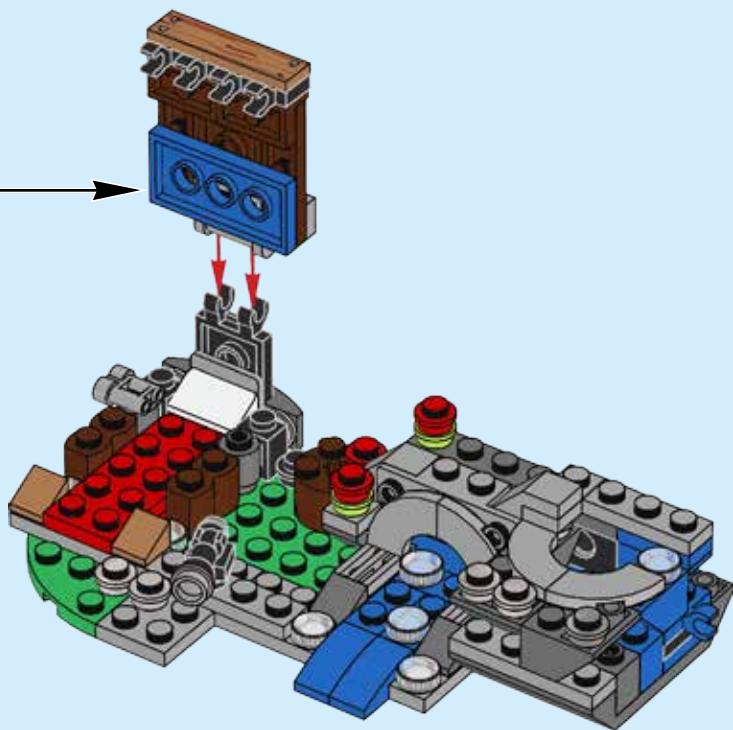  




2x

 47

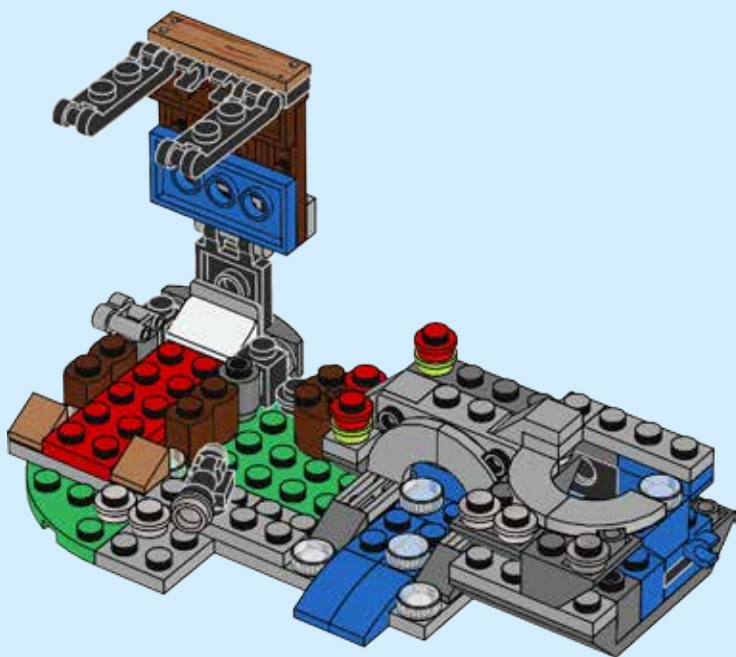

48

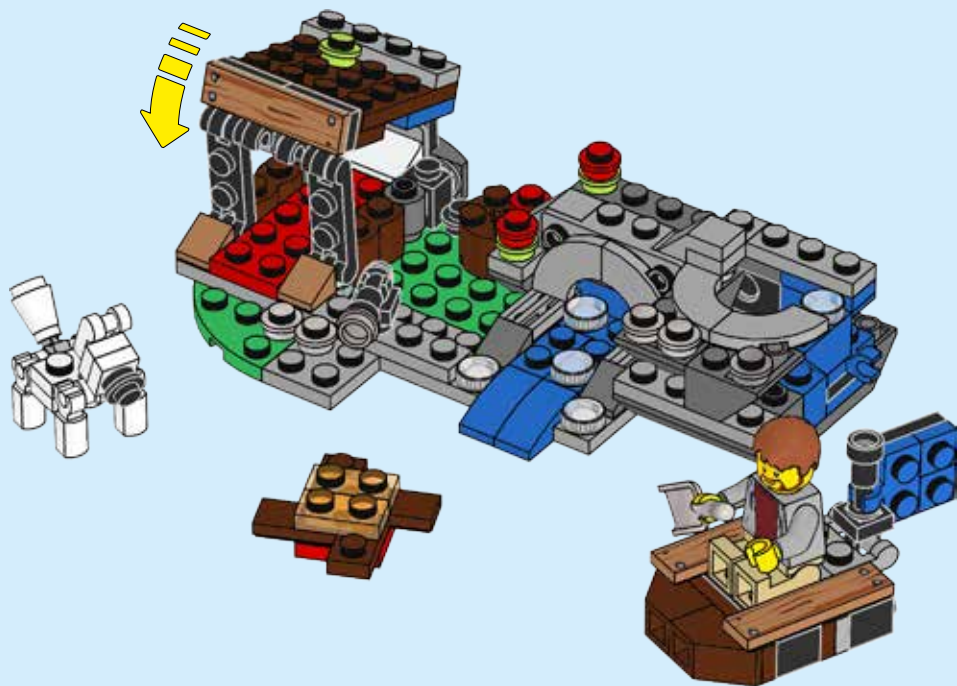 



4x
6052824



1x
4518400



1x
302401



1x
4538353



1x
6174937



1x
4547489



2x
4140583



4x
4666579



1x
4107623



2x
302423



2x
407023



2x
6072680



2x
366523



2x
6213381



7x
302323



2x
6055065



4x
6119159



4x
243123



2x
371023



1x
301023



1x
370923



1x
4181139



1x
4578503



1x
4216656



1x
614324



1x
6153512



2x
4538456



3x
614126



2x
407026



2x
6066102



2x
6157554



8x
4121715



1x
6092585



2x
6020193



2x
4556158



2x
302226



1x
258426



4x
4552347



2x
6099483



2x
4162443



5x
4619323



1x
4297713



2x
4114689



 
1x
6179850



2x
389426



1x
6038682

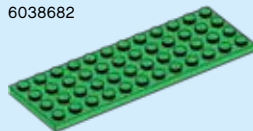

1x
4279059



1x
4529755



8x
4650498



1x
4173328



2x
4280341



2x
4211180



3x
4211166



1x
6078605



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346



CREATOR

LEGO.com/creator



CREATOR ISLANDS

