

CREATOR



40140

LEGO.com/creator

 
6112639 / 6112640




1




2

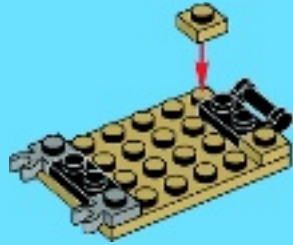


3

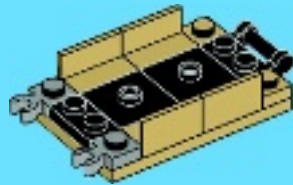 


4

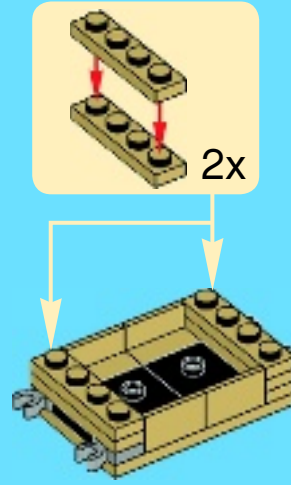 


5

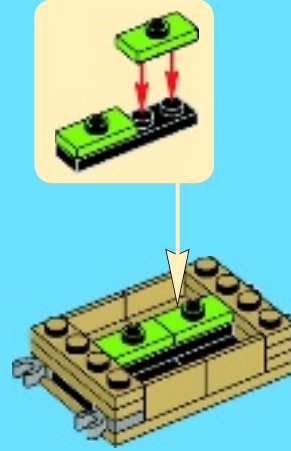 


6

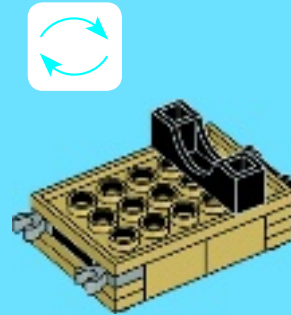 


7

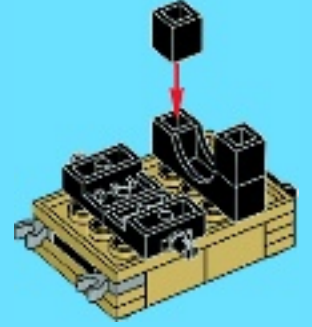 


8


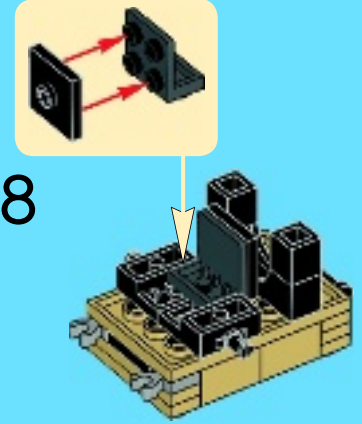 


9


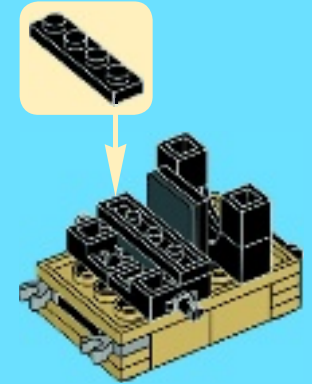 


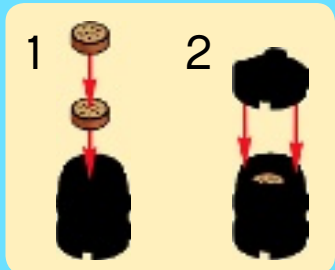 

10

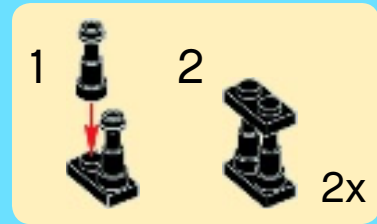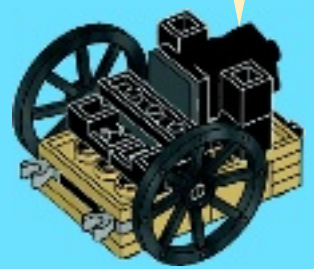  


12

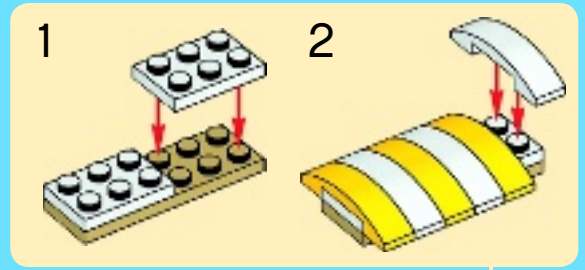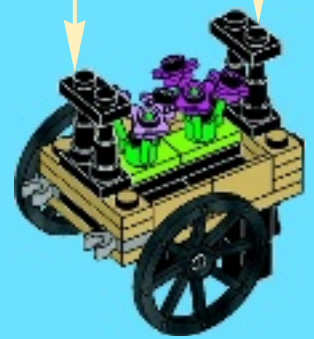  

14



 11

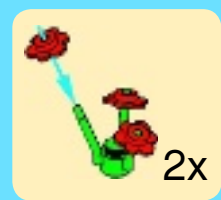

13



15

