



Disney
PRINCESS

41140



Disney
Whisker Haven
TALES
palace pets



LEGO.com/disneyprincess

1



2

 


3



4



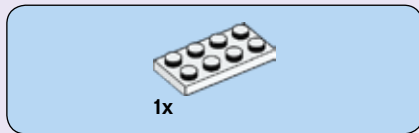

1





2x

2



4

 


2x





1x

3

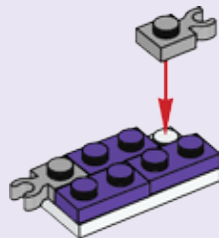




4

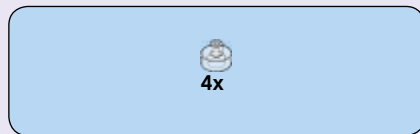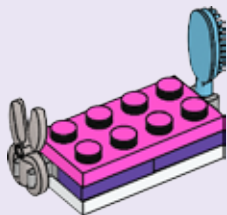  

5

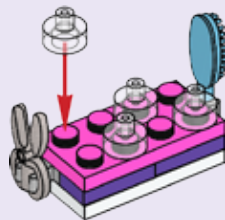 



1x



1x

 


1x



1x

6

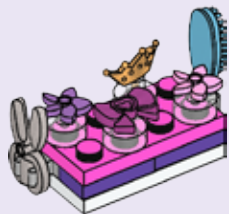



1x



1x



1x

 


1x



1x

1



2

 


3




4




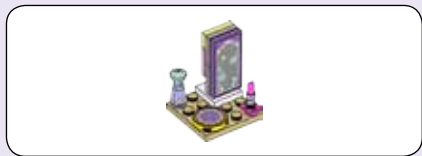


1

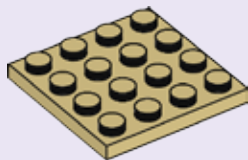 

8

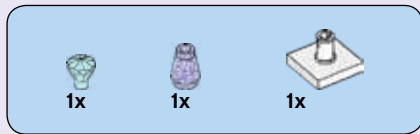 

2

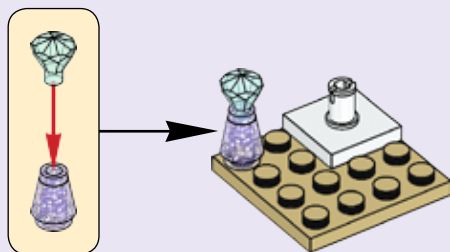 

1x



 
1x

 
3



1x

4

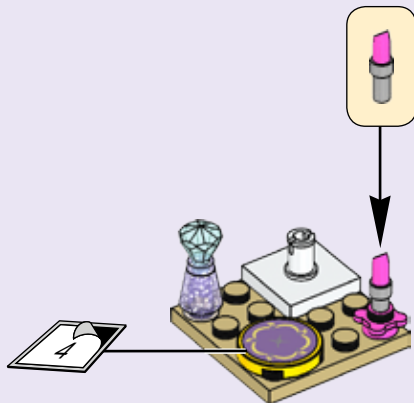

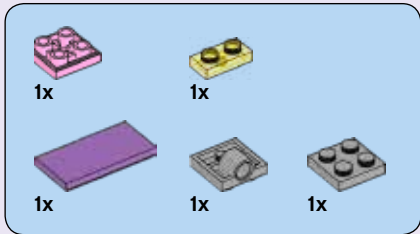


5


1



 2

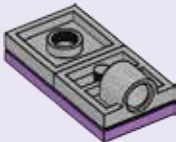

3

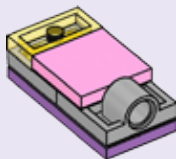 



4





  
5

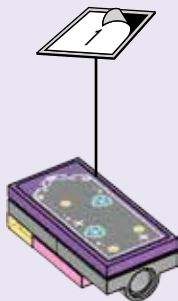


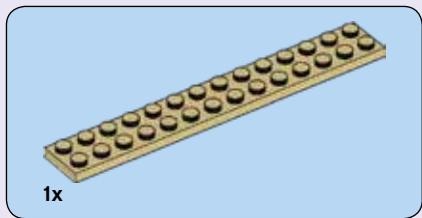



1x

  1

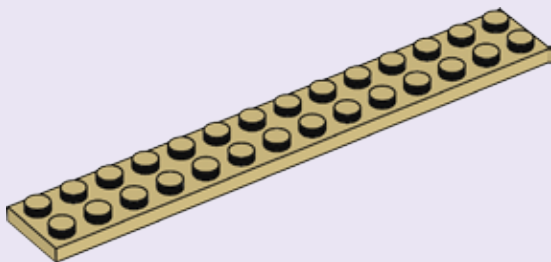


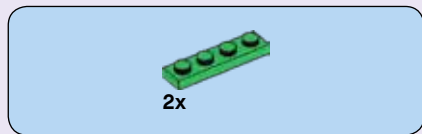


2

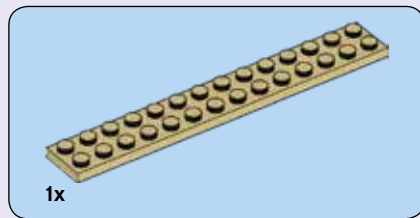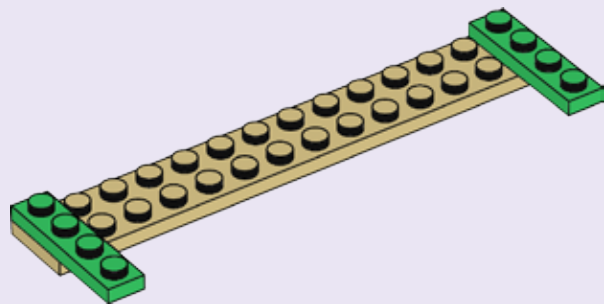  



3

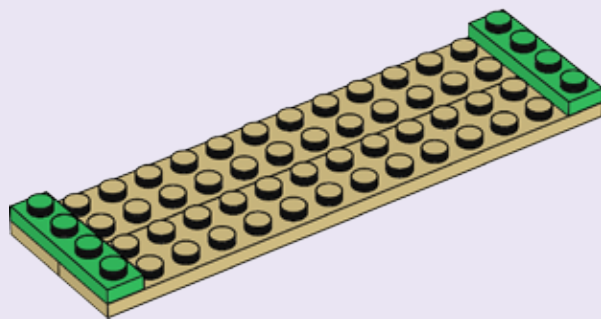 

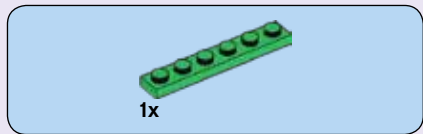 


4


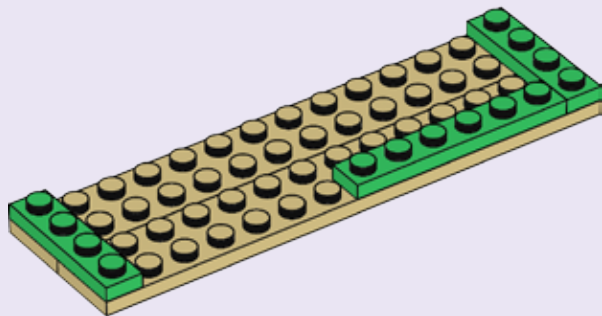 


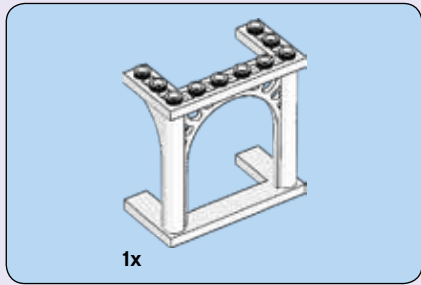 


5

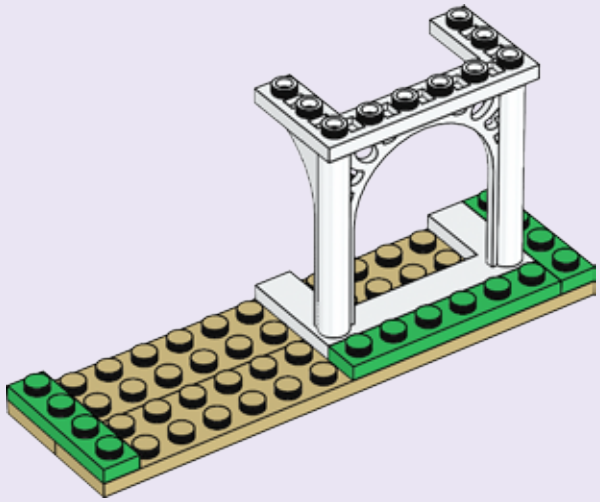 



6

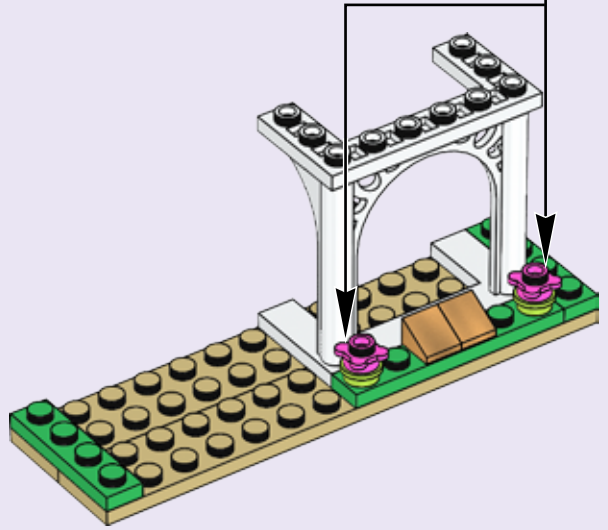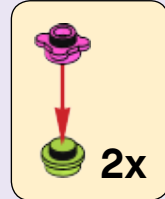  


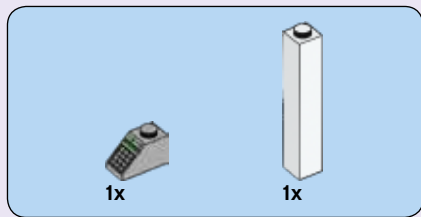 


7

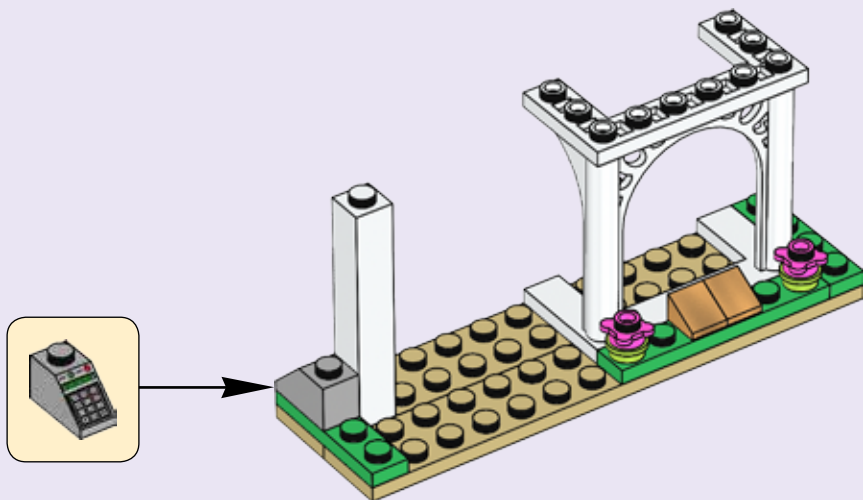 


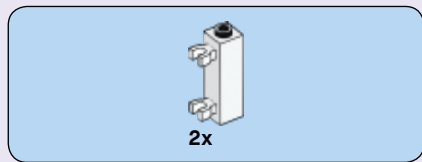 

8

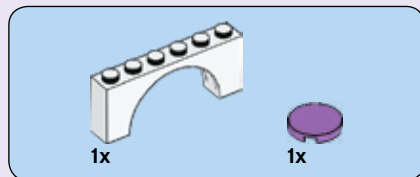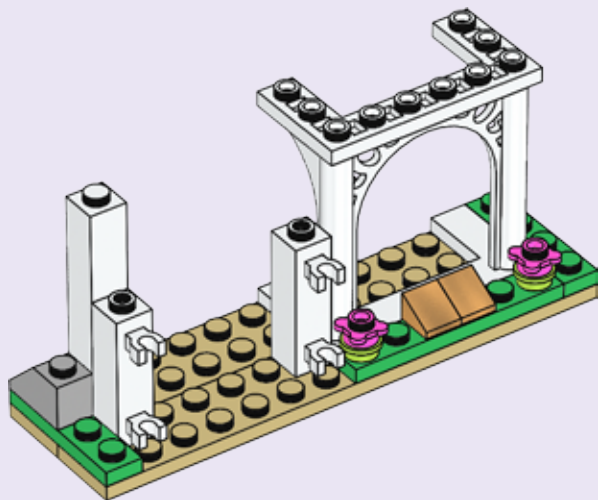  


9

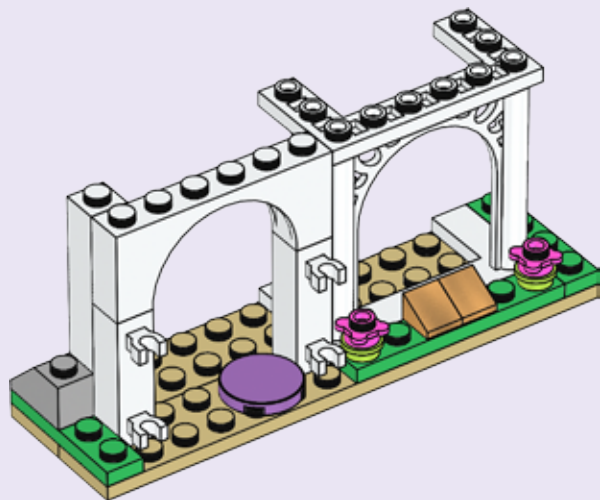 




3x

 10

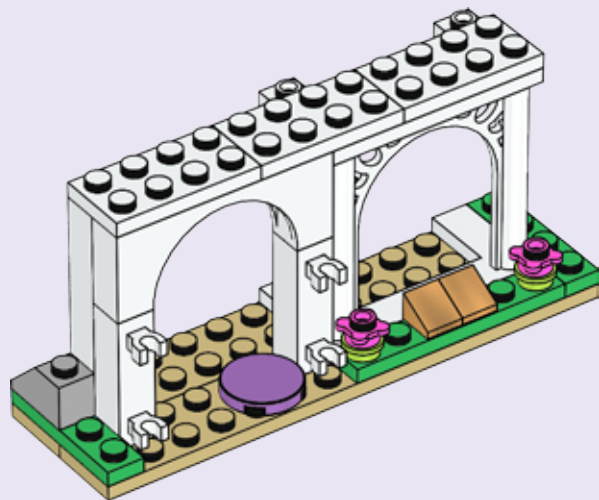




11


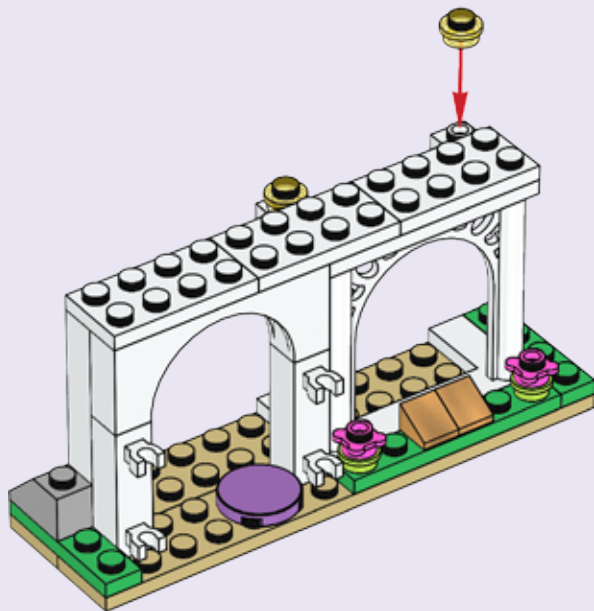 


12

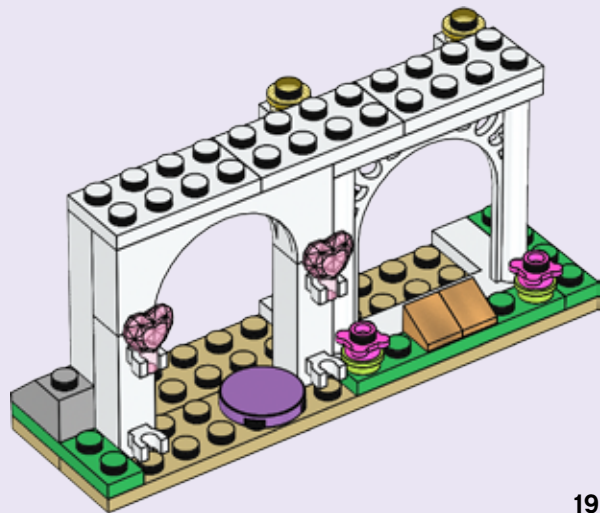 



13

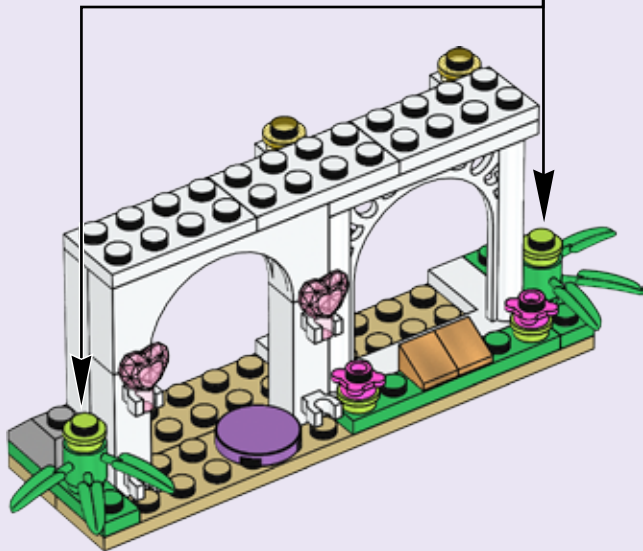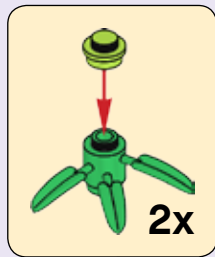  





1x



2x

  14

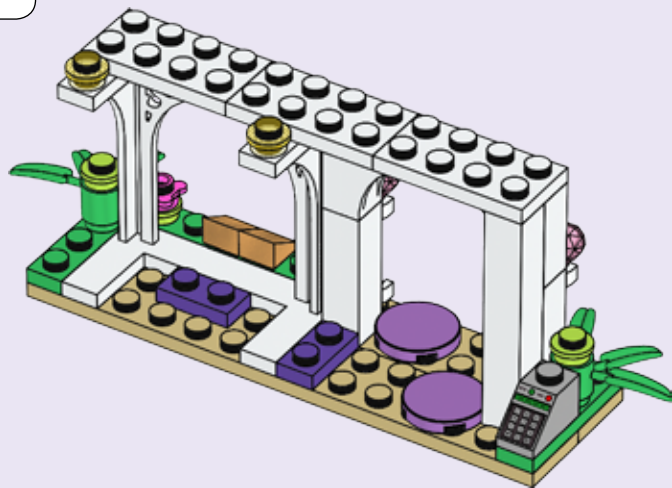





1x



1x

  15

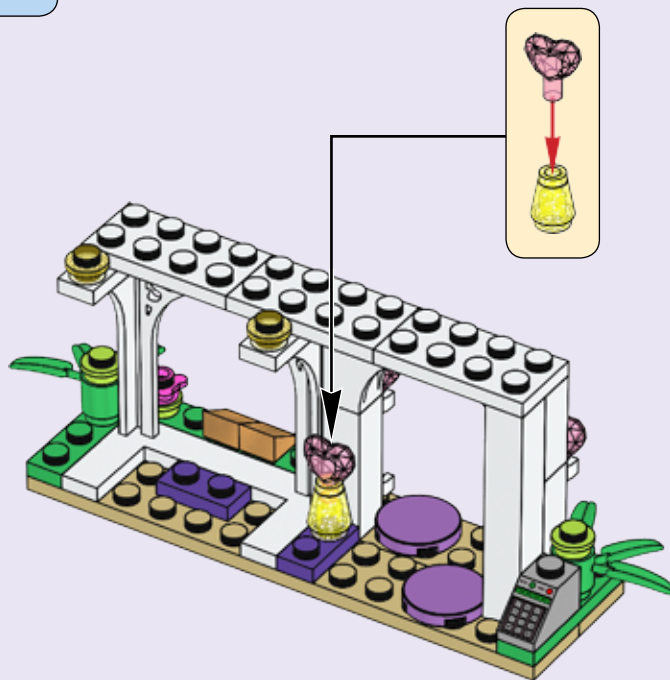

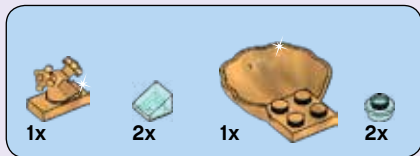

16

1



2

 


3




4



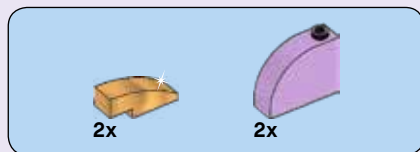

17

 



1x

 


2x



2x


18

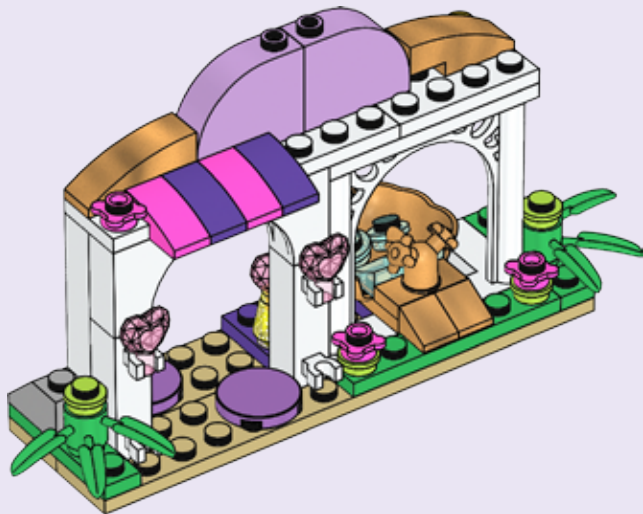



2x

 19

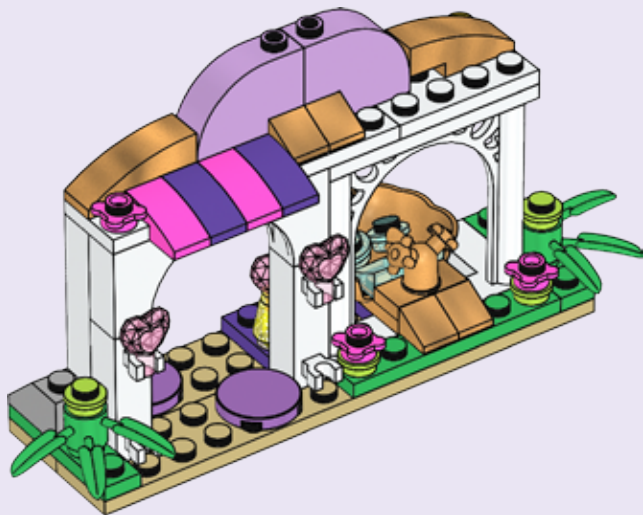



1x

 


2x



2x


20

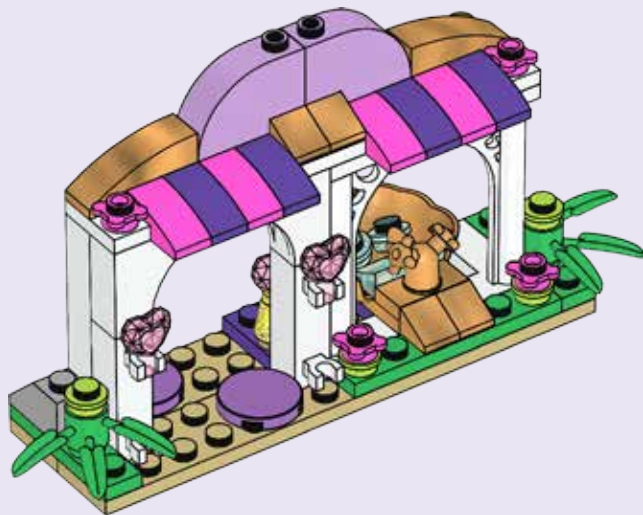




1x

 21

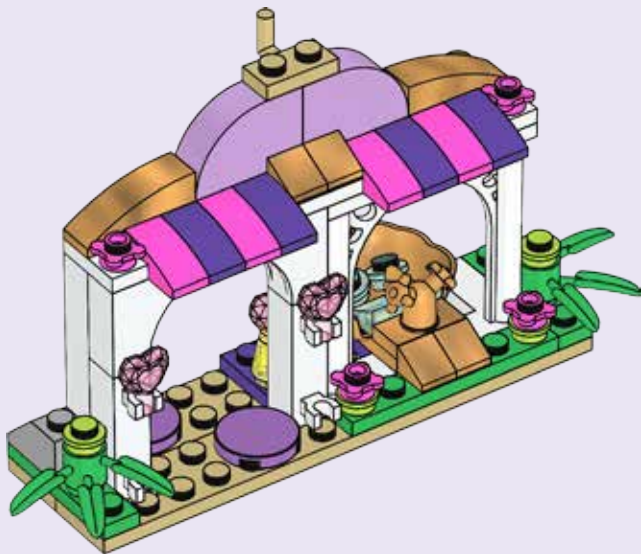



22

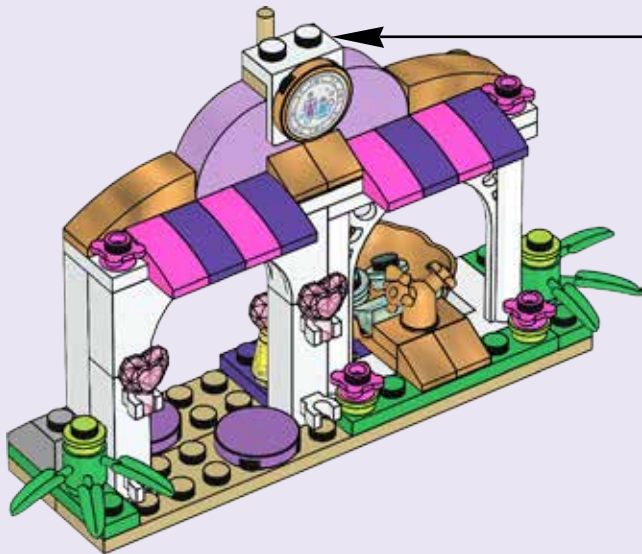 




1x




1x

  23

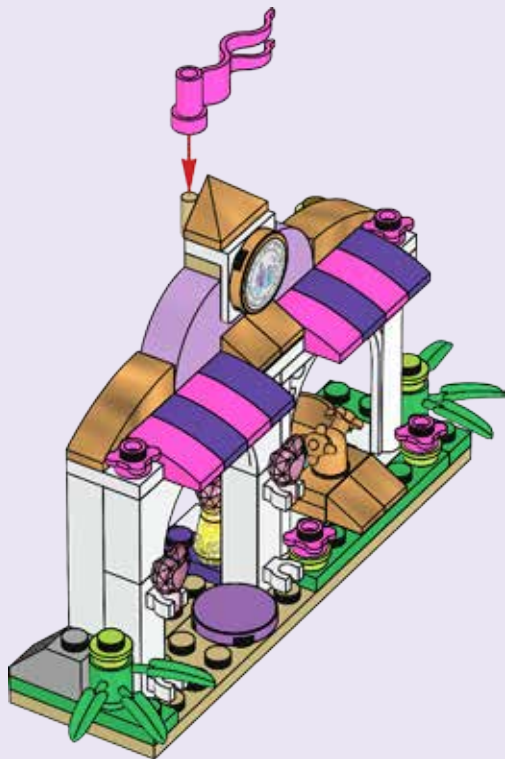



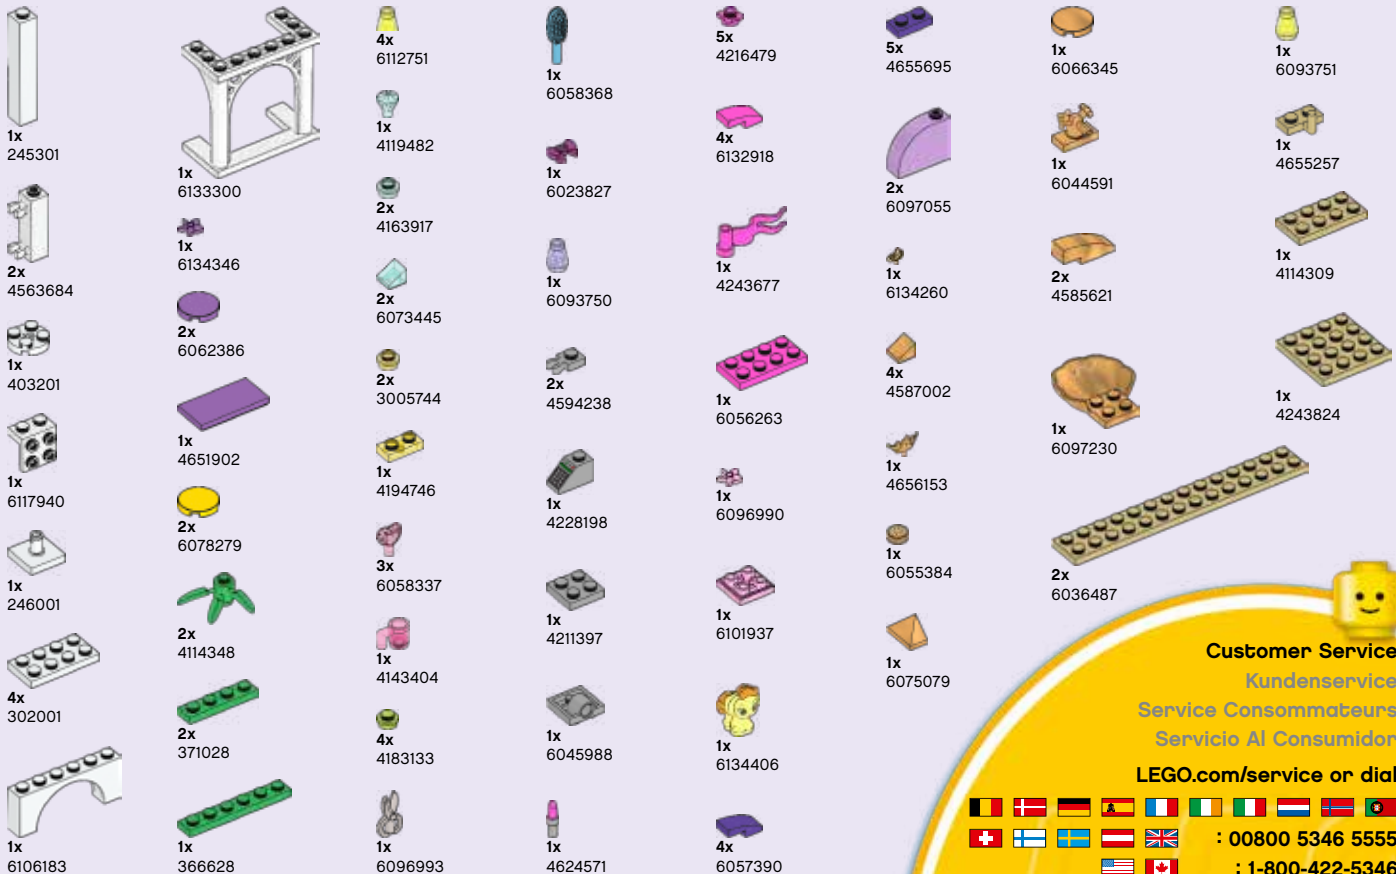

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346



Disney
PRINCESS



41141



41069



41140



41142



Disney
Whisker Haven
TALES
palace pets



41055



41063



41062



41061



41068



41066

