



Mixels

41580



 
 LEGO.com

6163229

1



2

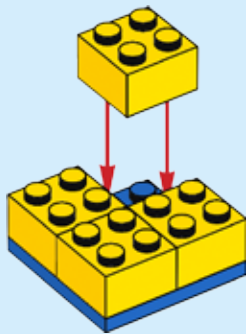


3




4



 
5

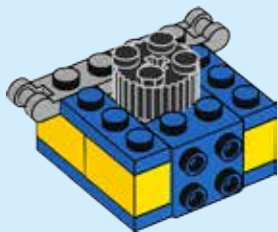


6

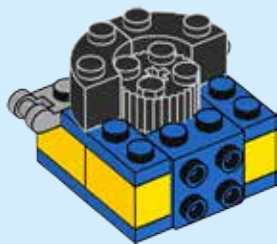 


7

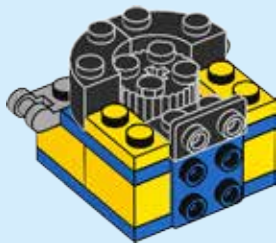 

8

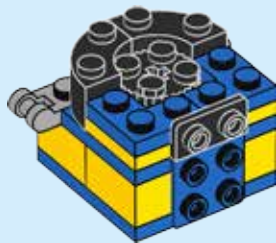 

9

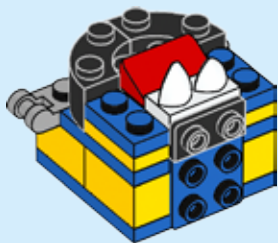 


10




11



 1






2

 


12




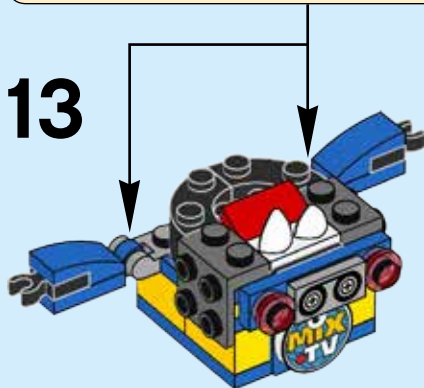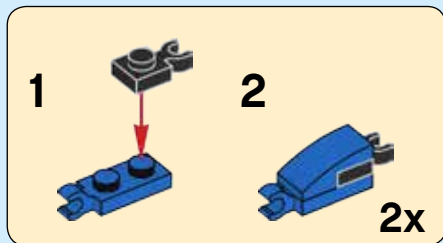  

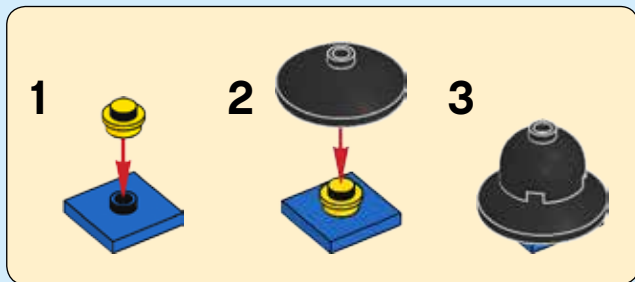 


14

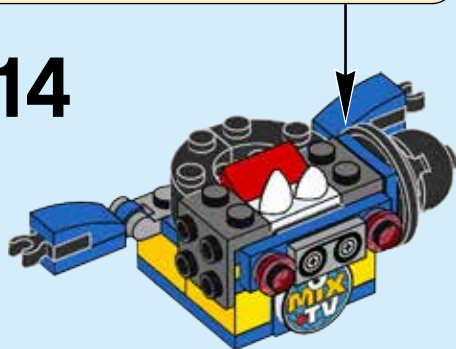 


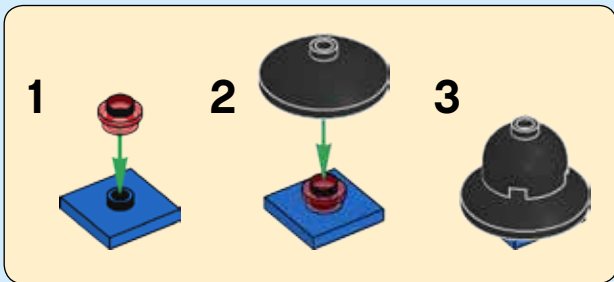 


15

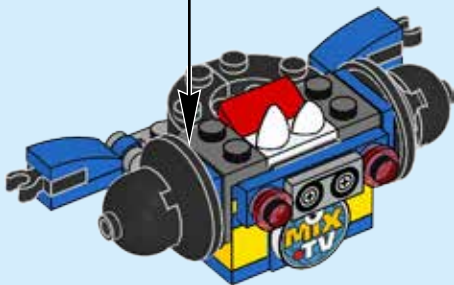 



16

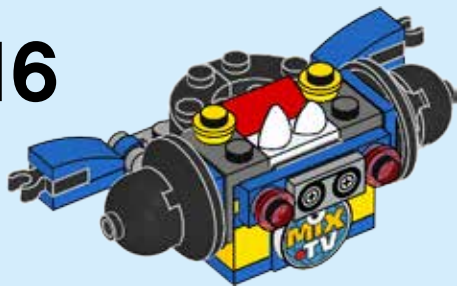 

17

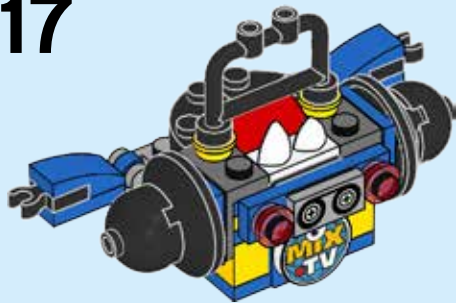 


18

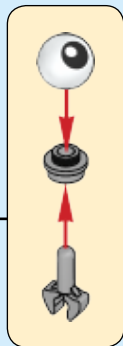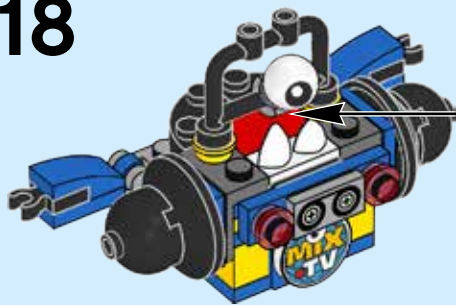  


19




  20

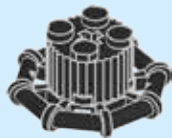


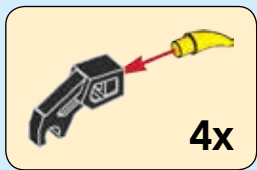


21

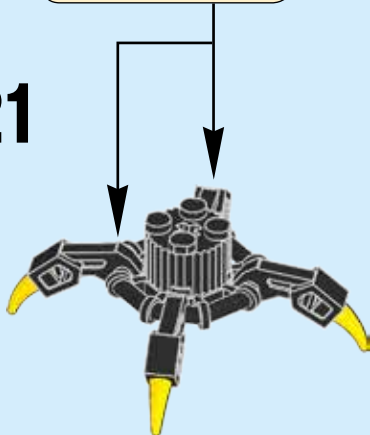 

22

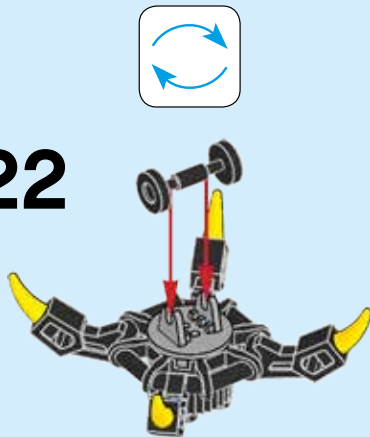 


23

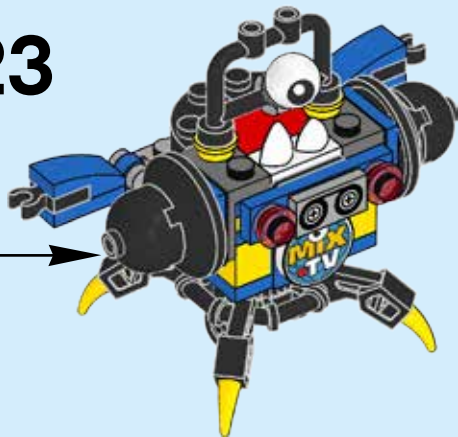 




24

 


25



  26

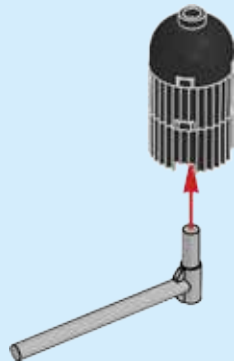

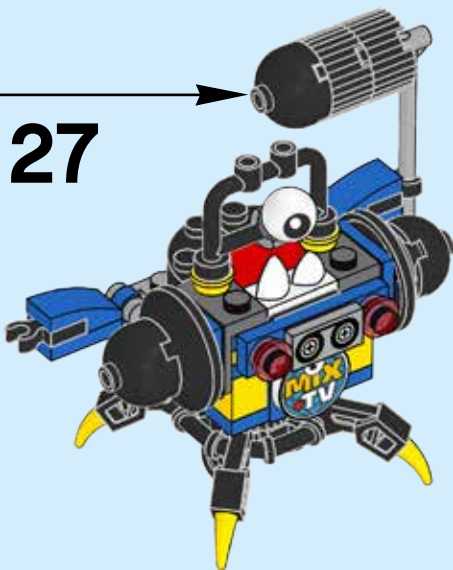


2x
4568990


2x
6055065


3x
4216660


4x
6006739


1x
4651524


1x
6124825


3x
614124


1x
6117968


2x
6126049


2x
4567436


2x
4550017


1x
4211373


1x
4542590


4x
6014033


2x
242023


3x
3005741


2x
4180087


4x
6024730



1x
4654046


1x
4565433


2x
302324


2x
362323


1x
6056225


1x
408326


1x
249626


2x
4515369


2x
6117972


4x
300324


1x
371023


1x
6046384


1x
4243815


1x
6149575


1x
6018805


1x
6020193


Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial


: 00800 5346 5555
: 1-800-422-5346



**SCREENO
41578**



 
**CAMSTA
41579**



**MYKE
41580**



**NEWZERS
MAX!**

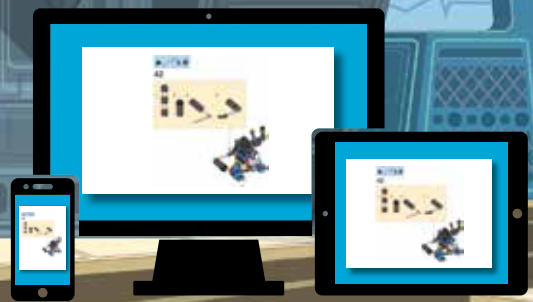

LEGO.com/mixels





Mixels

SERIES
9



COBRAX
41575



MYKE
41580



CAMSTA
41579



MYSTO
41577



SWEEPZ
41573



SCREENO
41578



SPINZA
41576

 
 


COMPAX
41574



GOBBOL
41572



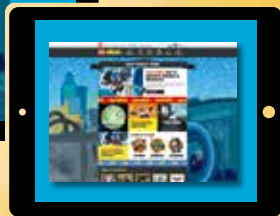

LEGO.com/mixels



club™



1 LEGO.com/club



2



3

