



CITY



60223



1



2



3



 
1



2



3

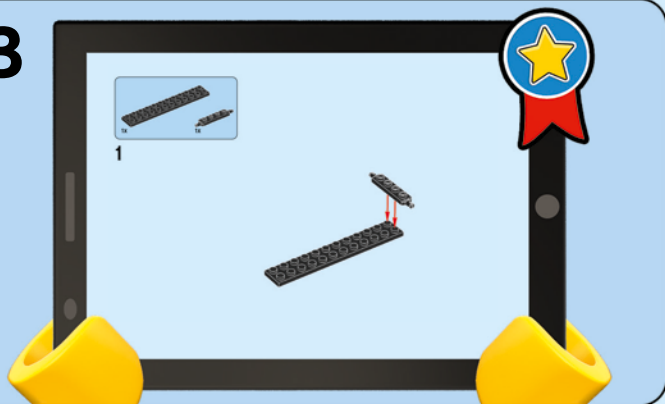

LEGO.com/apps

Check for compatibility

Kompatibilität prüfen

Vérifier la compatibilité

Controlla la compatibilità

Comprueba tu compatibilidad

 
 
Verificar a compatibilidade

 
Ellenőrizd a kompatibilitást

Pārbaudīt saderību


检查兼容性




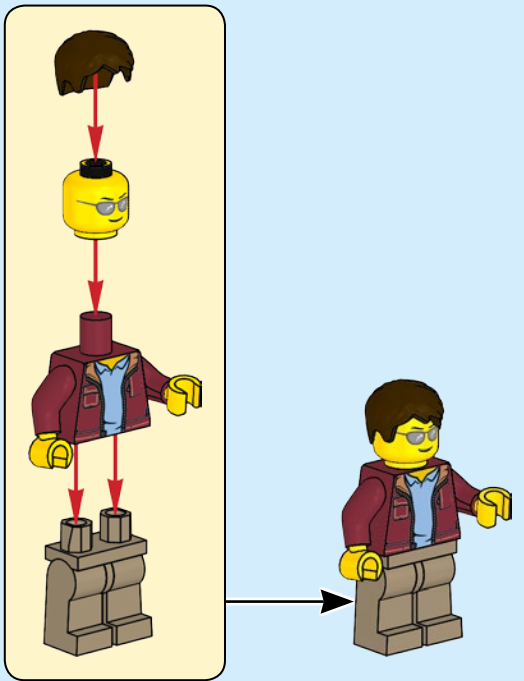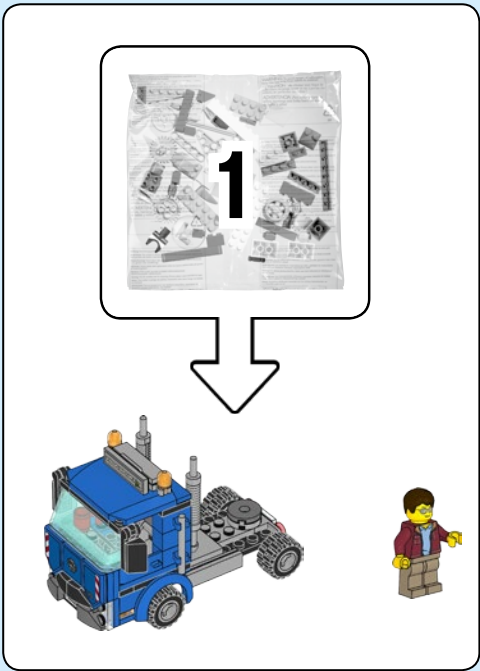


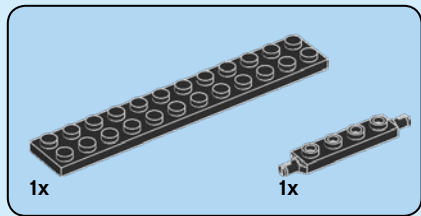


1

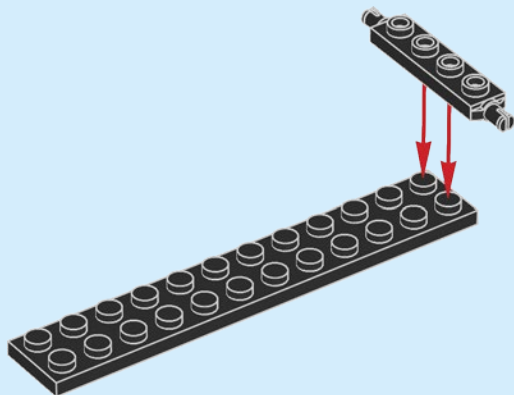 


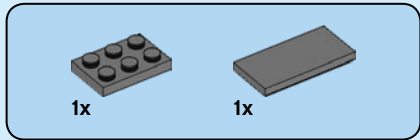 


2

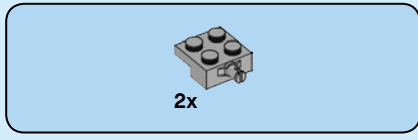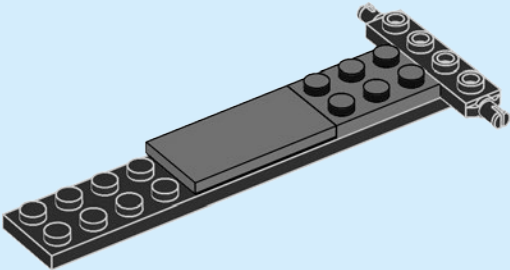  



3

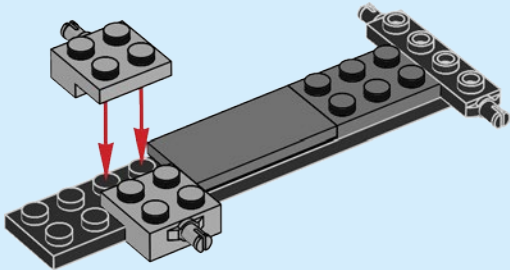 


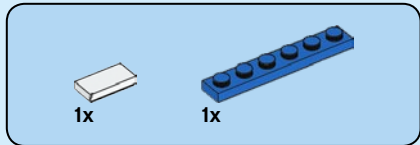 


4

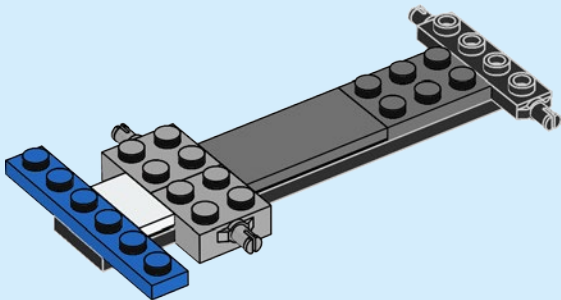 


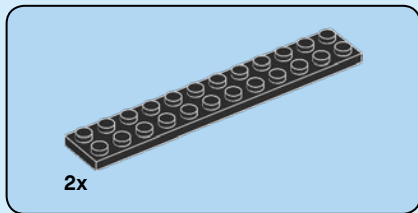 

5



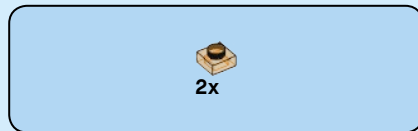 
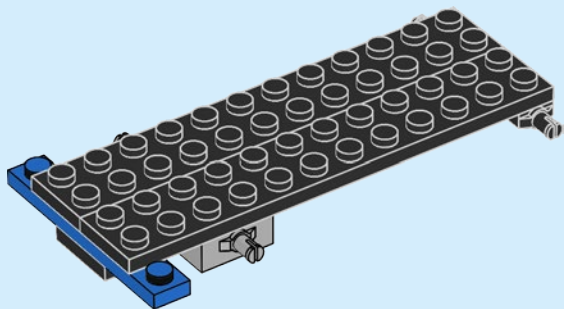 




6

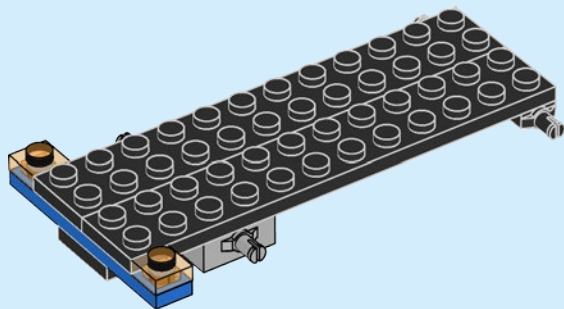 





7

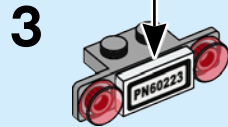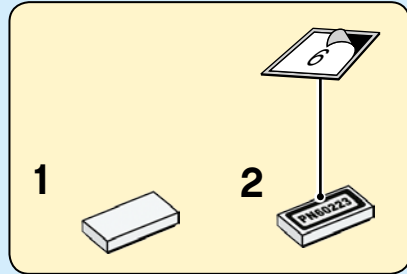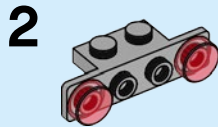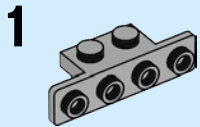    

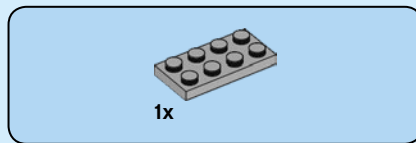 
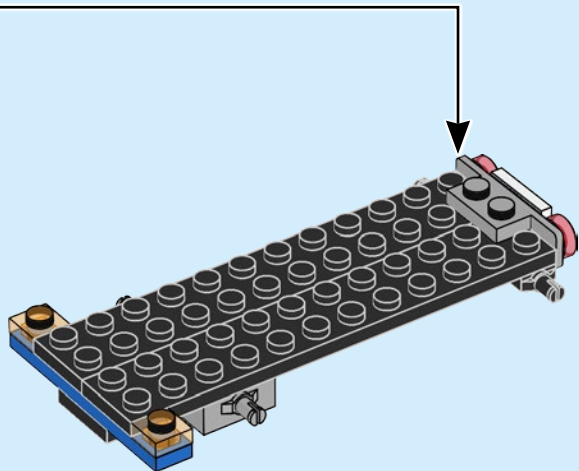 


8

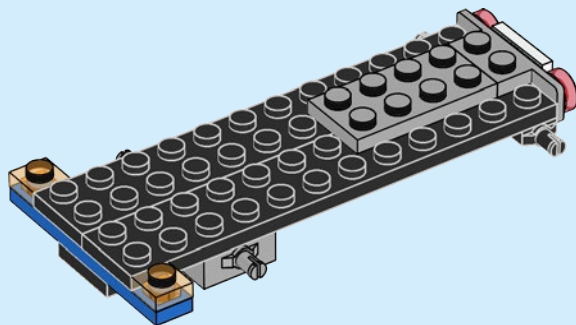 

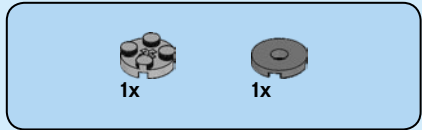 

9

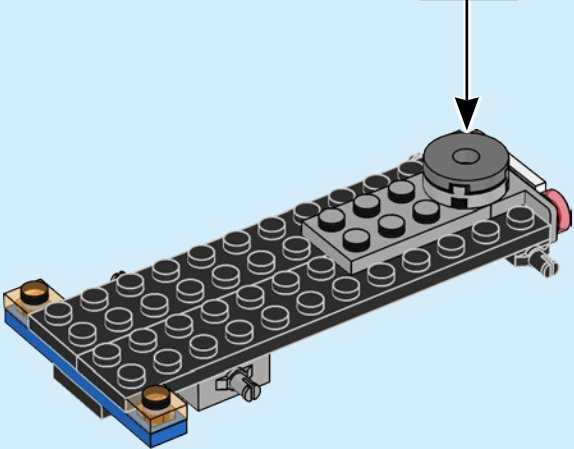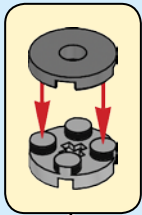  




2x




1x

 
10

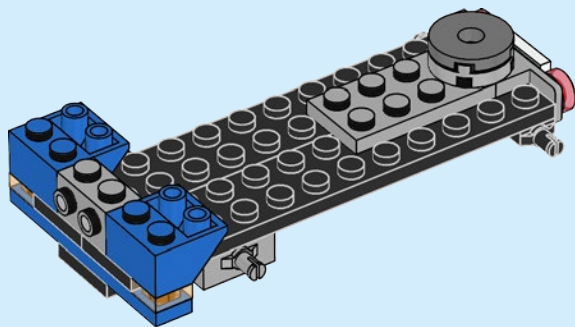



2x

  
11

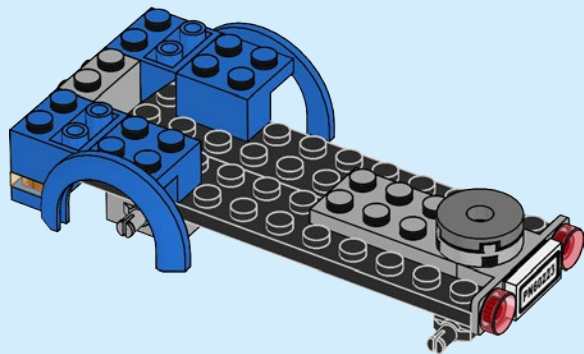


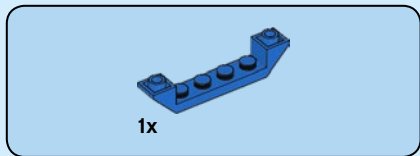



12

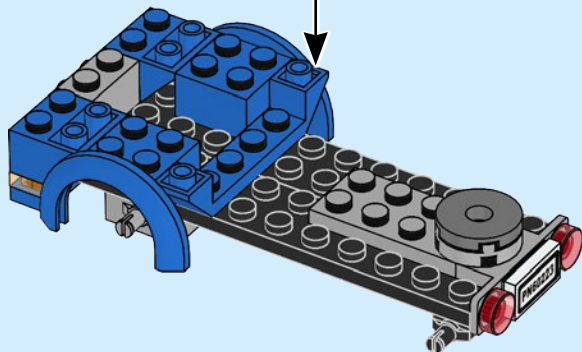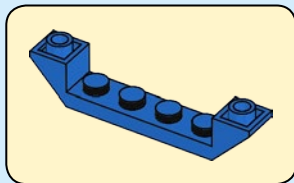  


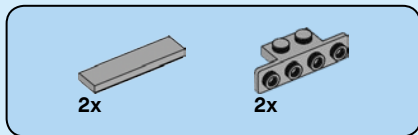 



13

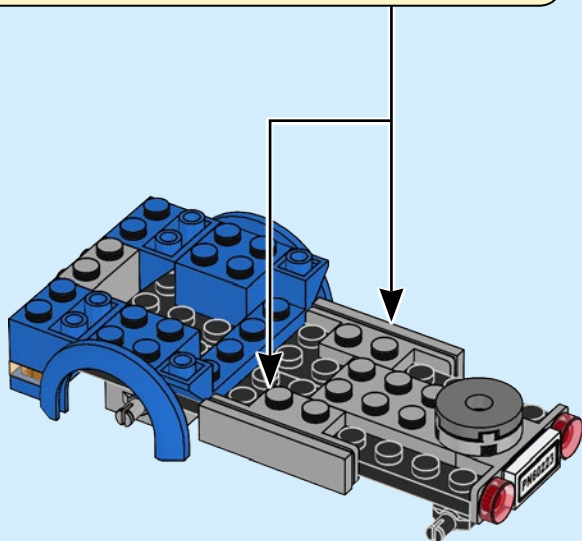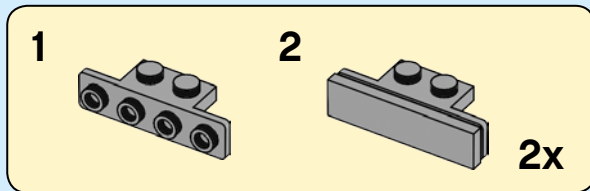  


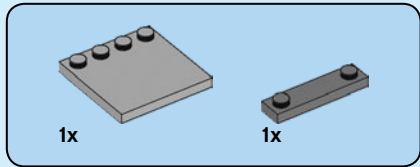 


14

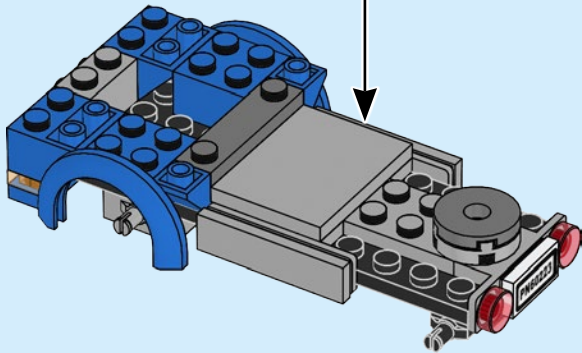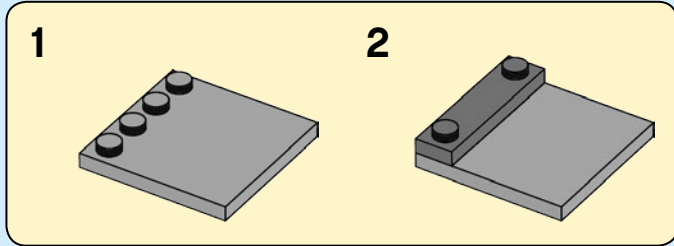  


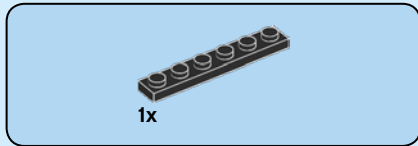 


15

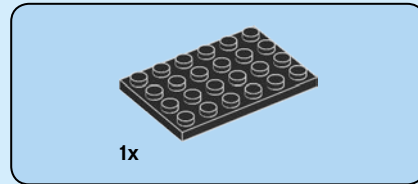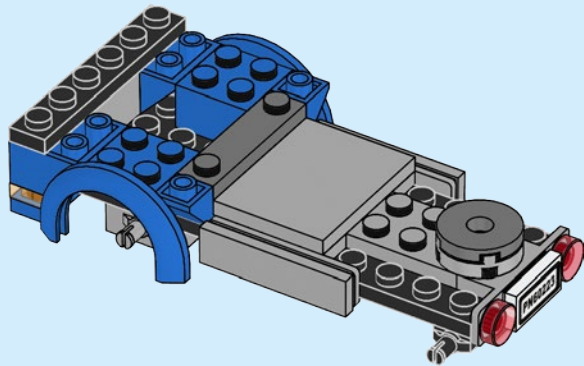  


16

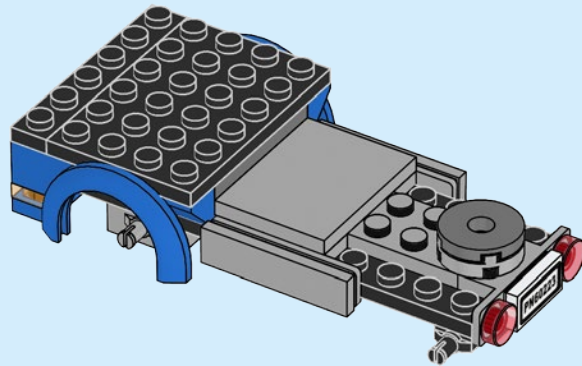 


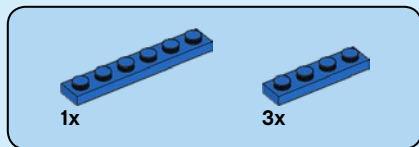 

17

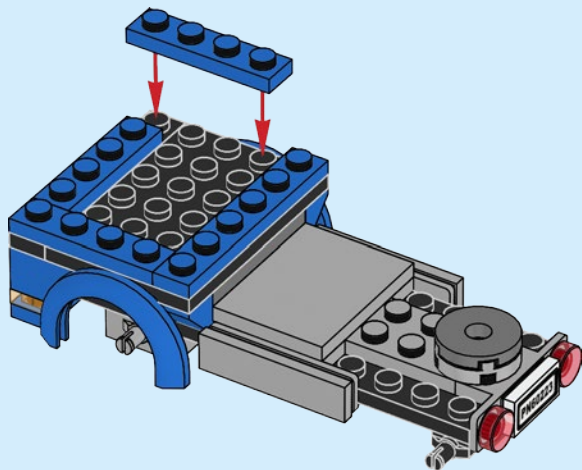 


18

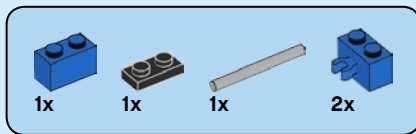 

18

 1



2

 


3



4



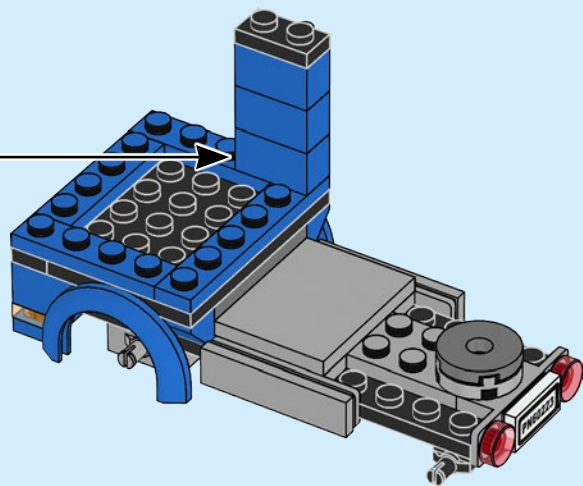




1x




2x

 
19

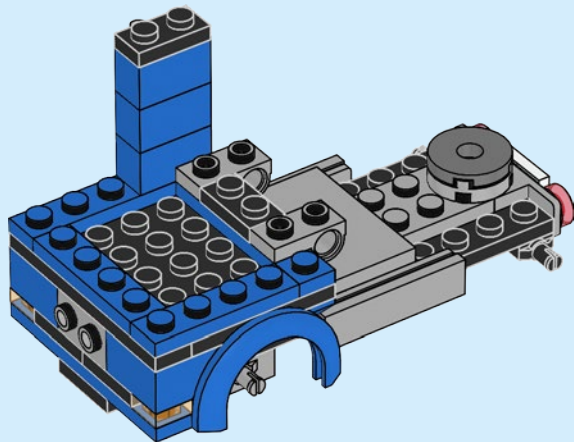


2x

  20

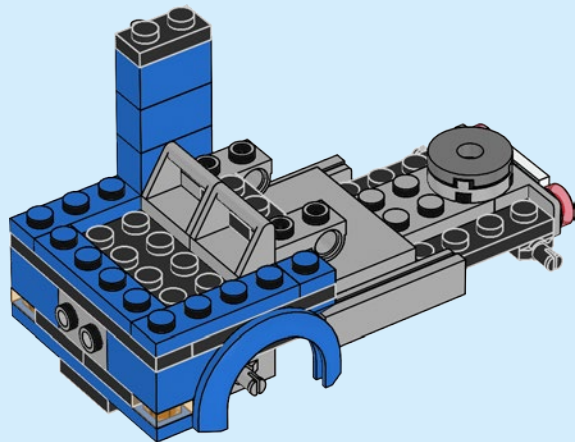


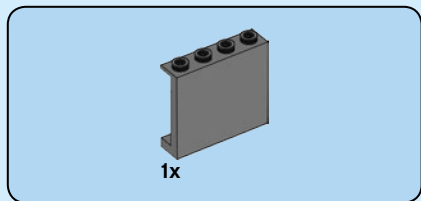

21

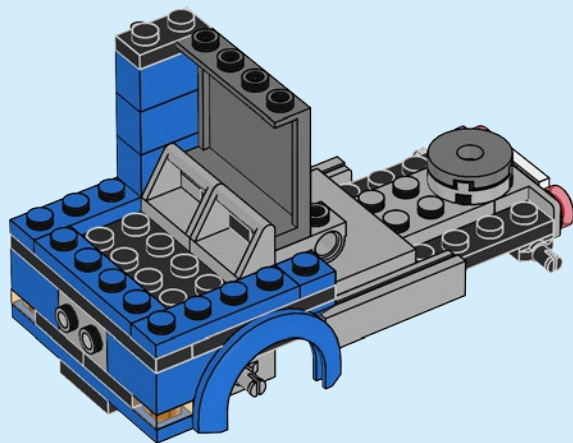 


22

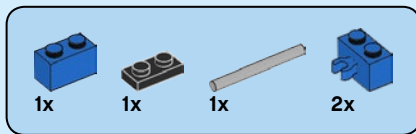 

22

 1



2

 


 
3





4



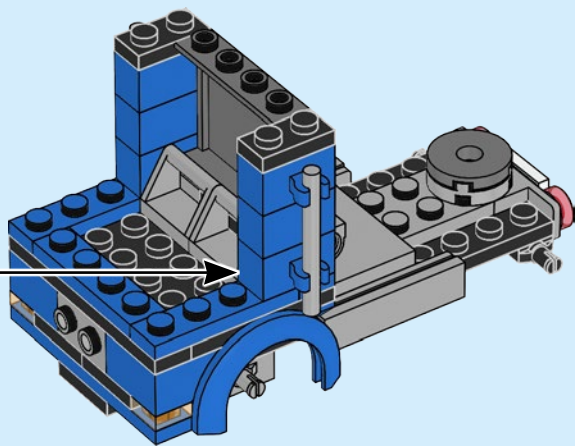


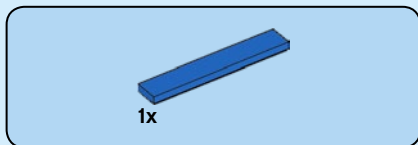

23

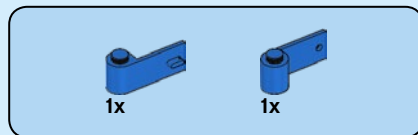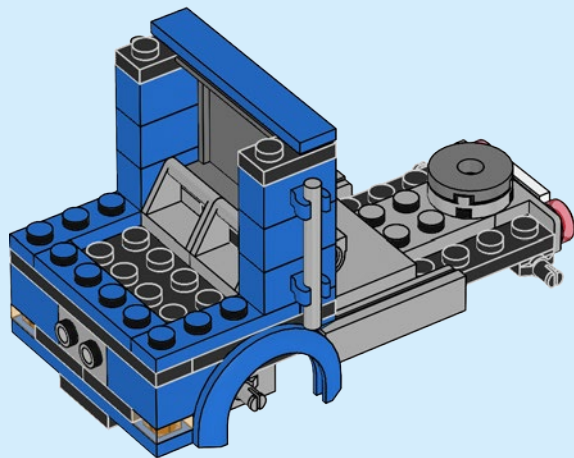  

24

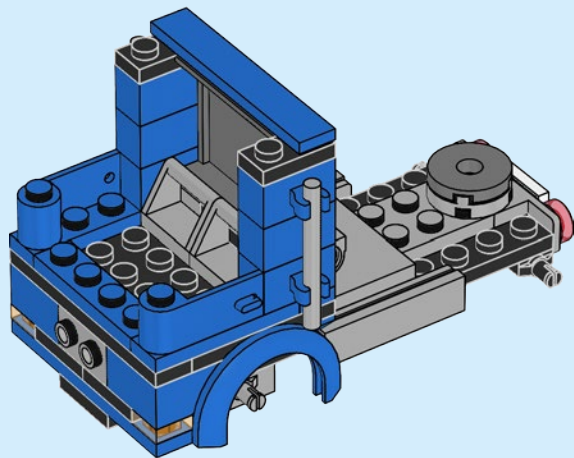 




1x




1x


 
25

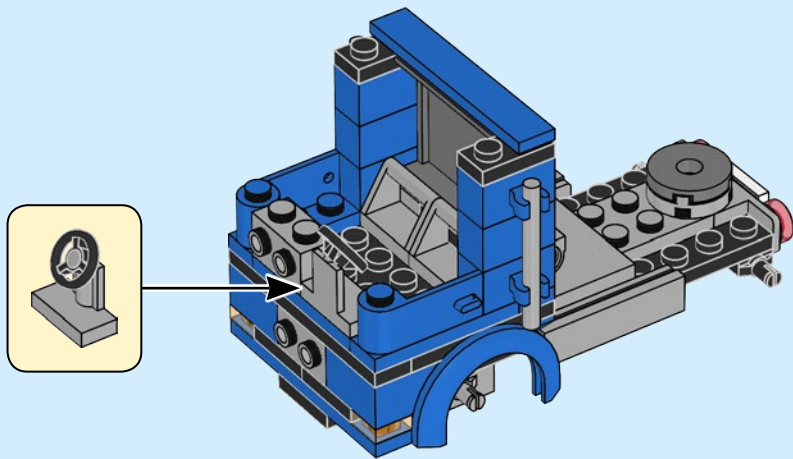


26

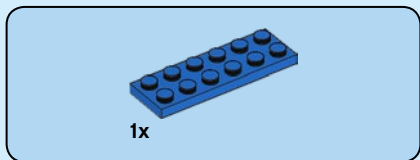 

26

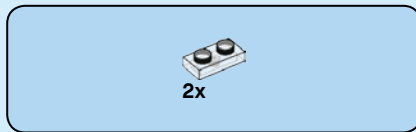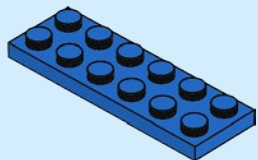  


27

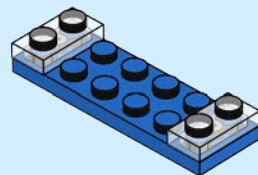 






2x

  28

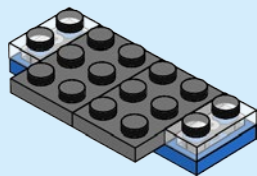


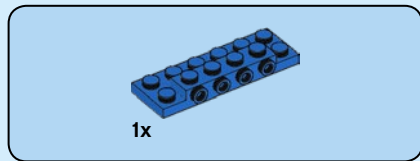

29

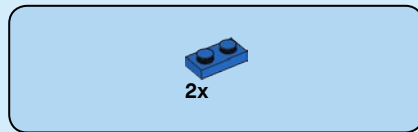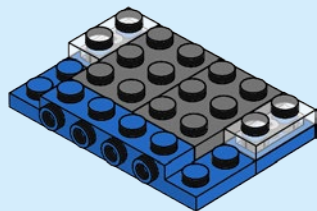  




30

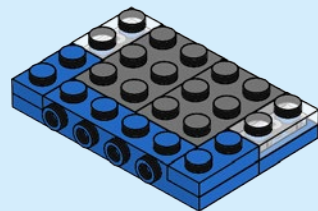 



2x

   31

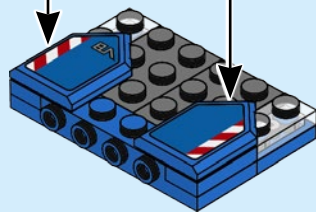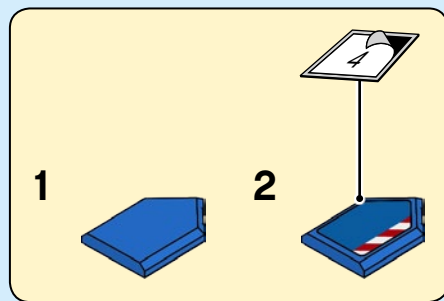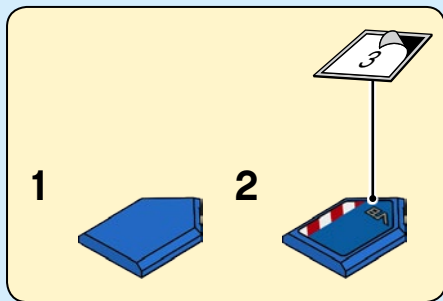






1x





1x

   32

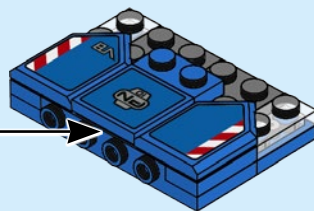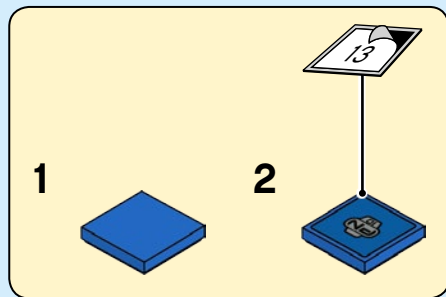

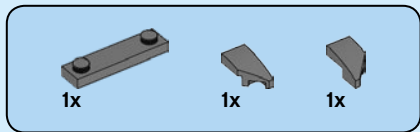

33

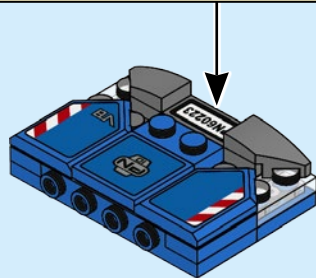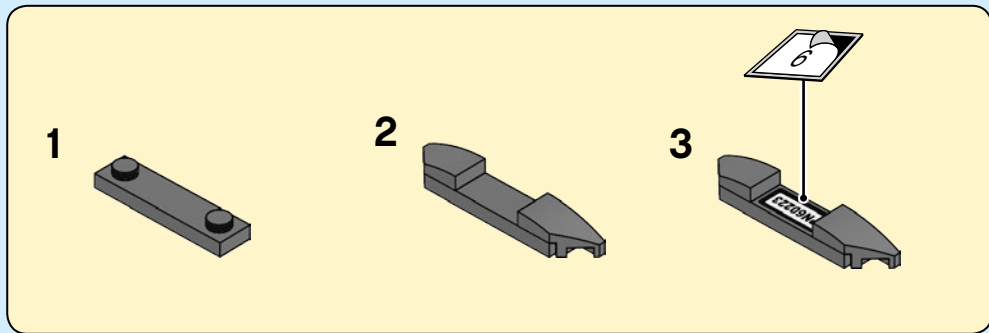  




1x




1x

 
34

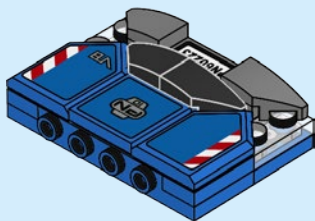

35

 


36

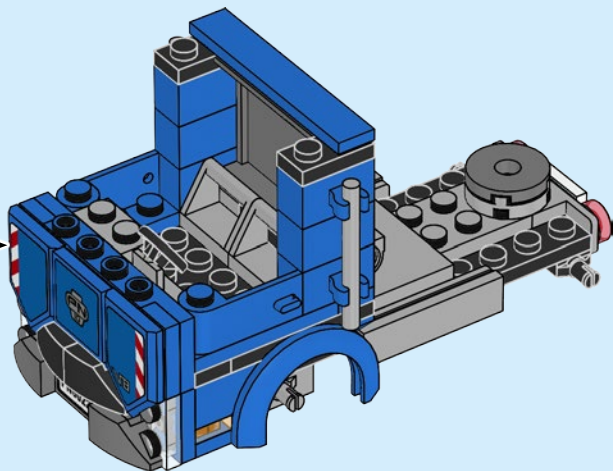 




1x


 
37


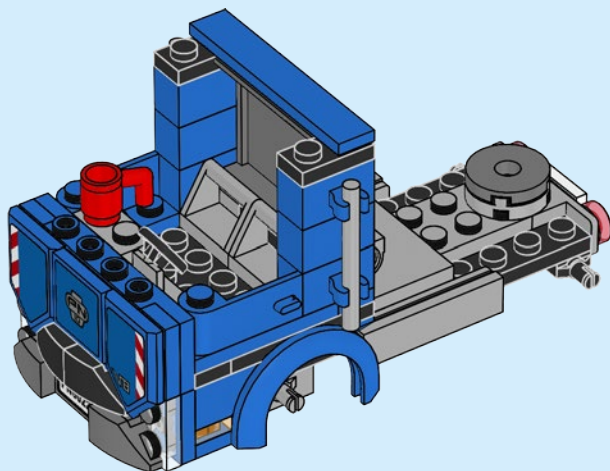


34

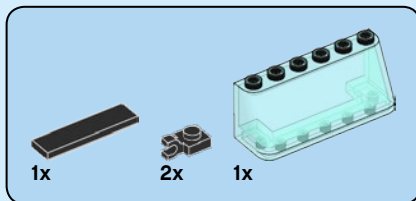 


38

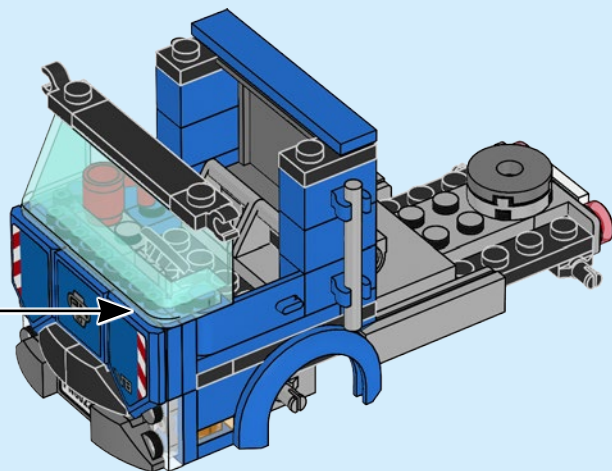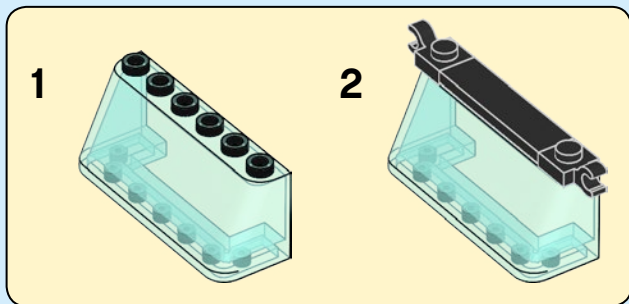  


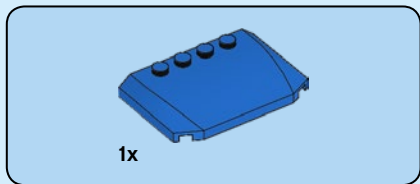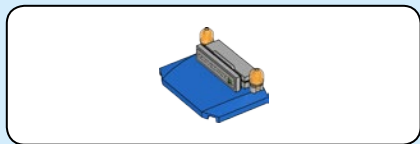  


39

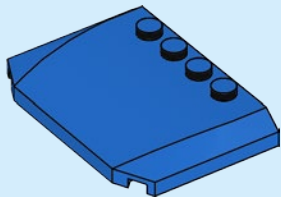 

36

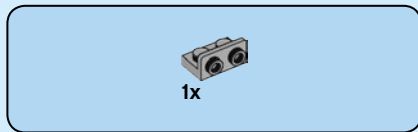 



40

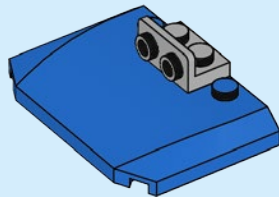 




2x

  41

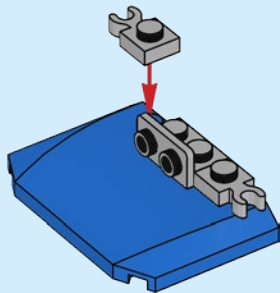

1x


 
42

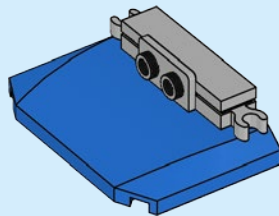




2x

  43

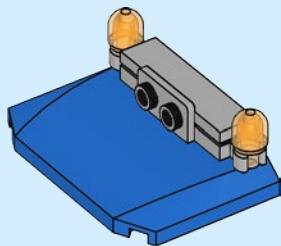


1x

 44

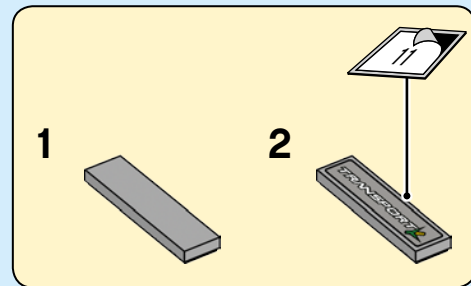


1


 
2

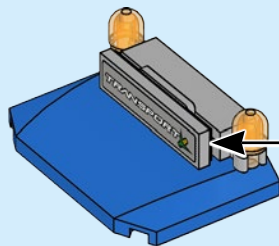


45




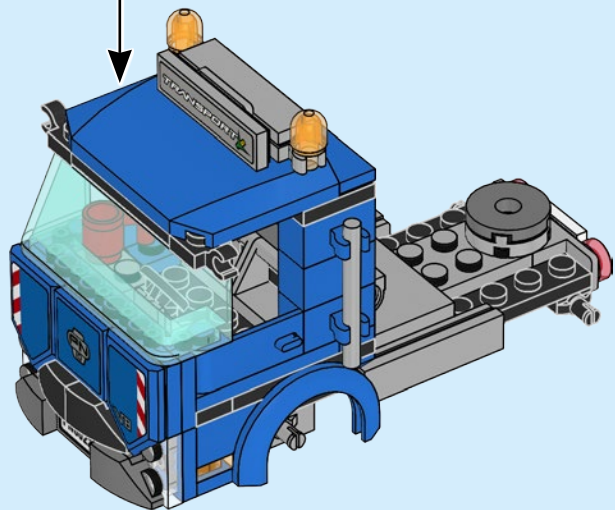 



46

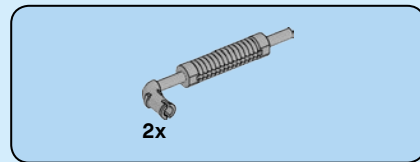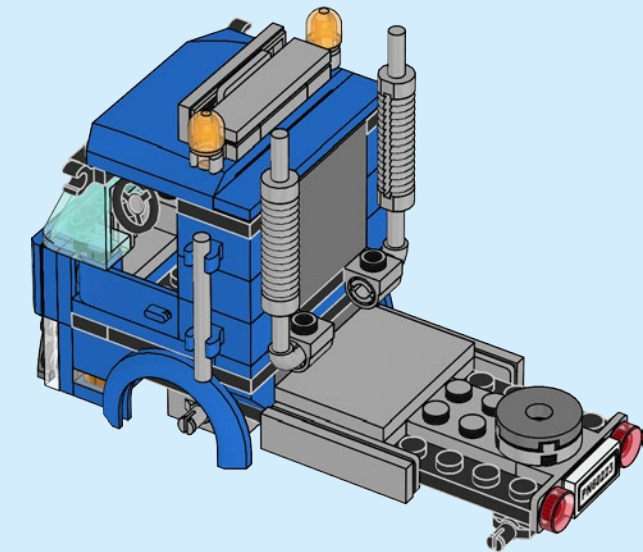  



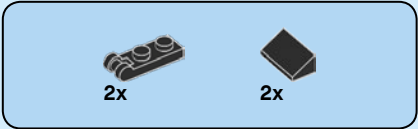 


47

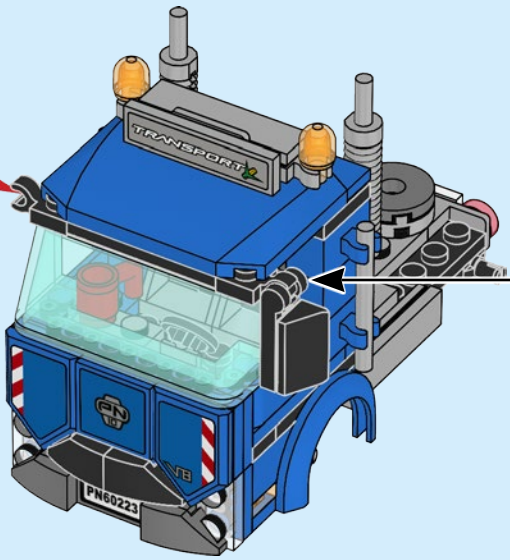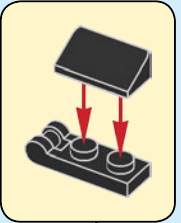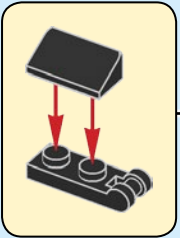    


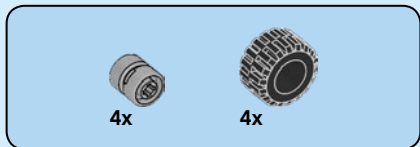 


48

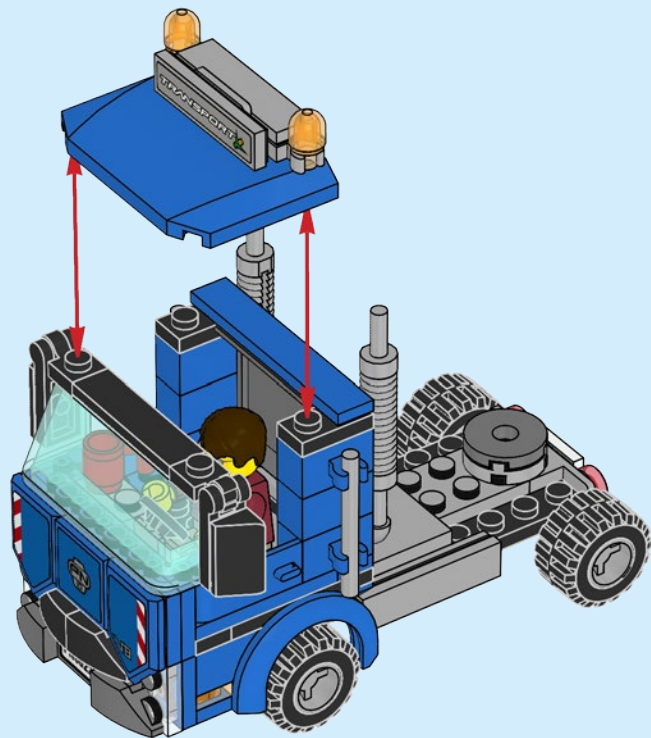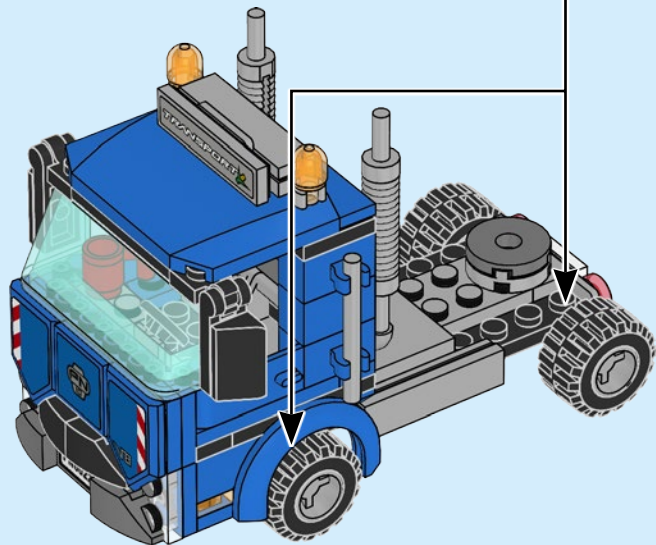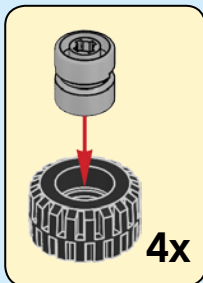   




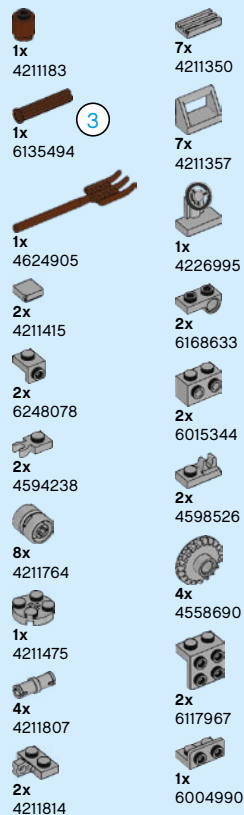 


 


1x
6138633

 

2x
4211008

 

2x
4210997

 

1x
4211122



2x
4211090



1x
6204668



1x
6020189



1x
6204667



1x
6055313



2x
4567887



2x
4210631



2x
6029948



2x
4210884



2x
4521187



1x
6118832



3x
4211043



2x
6099909



7x
4211103



2x
6177704



4x
4598769



1x
6008715



2x
6178912



1x
4560184



2x
4210637



1x
4294180



1x
4211056



1x
4243831



2x
6039699



2x
6117971



4x
6116259



2x
4109679



2x
6021539



1x
4112838



2x
6042951



6x
371028



1x
74040



2x
6047426



6x
302328



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :

