

 
 


CITY


7498



1

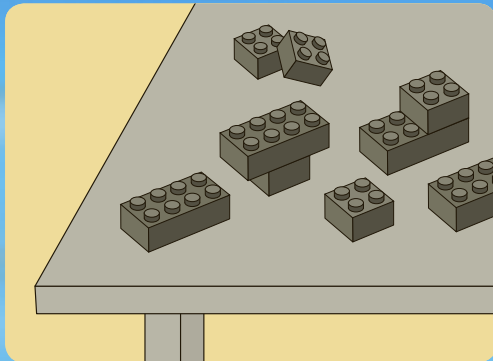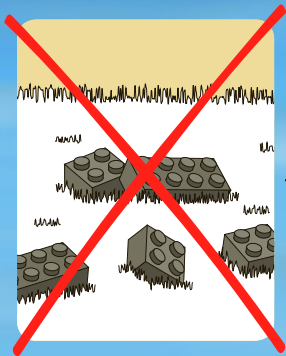

2

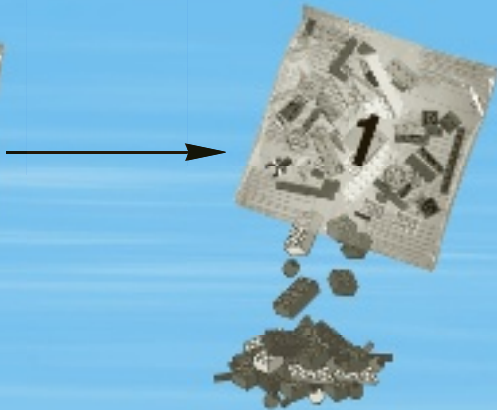 


2






 
1

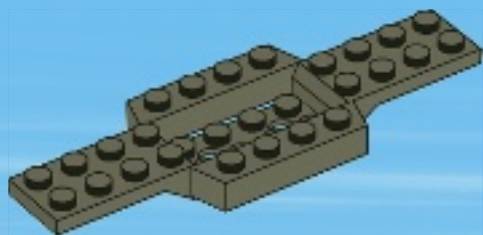


2

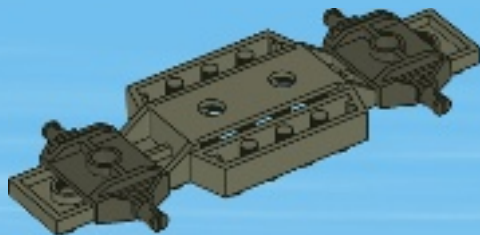 


3

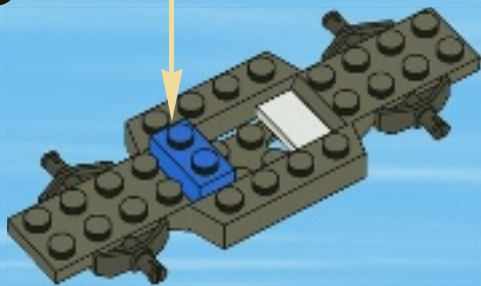 


4

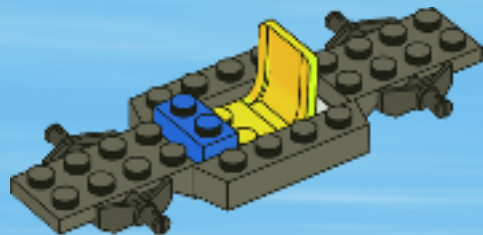 


5

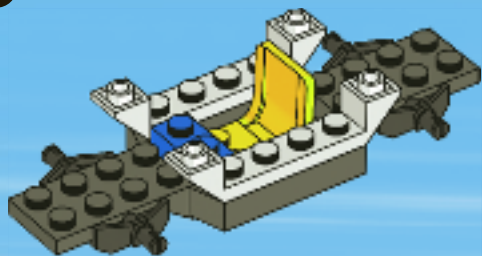 


6

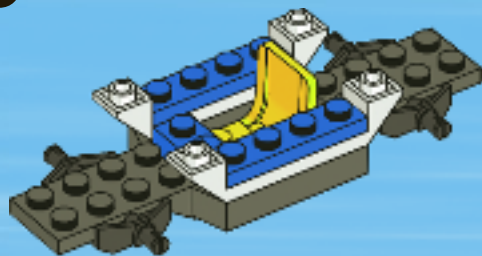 

7

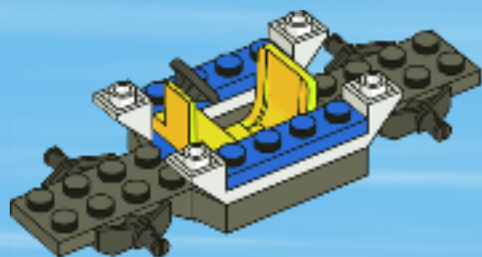 


8

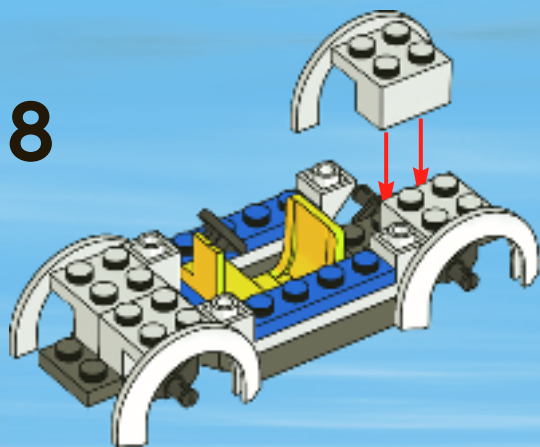 





1

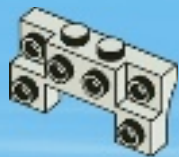 

2

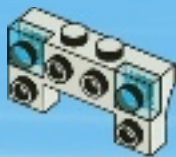 

3

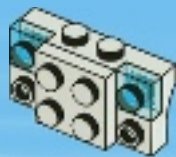 

4



 
5




6




9

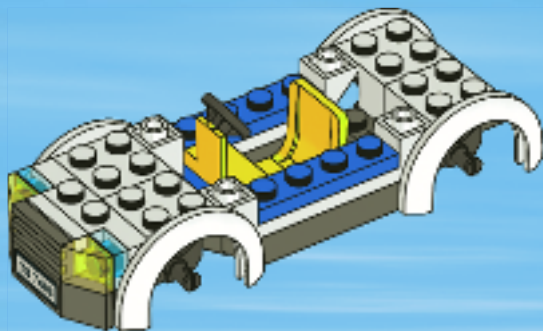

1

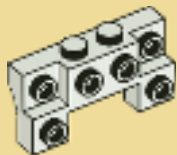 


2

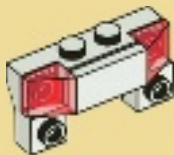 


3



 
10

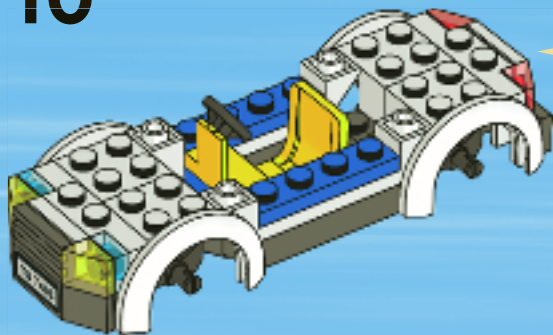


11

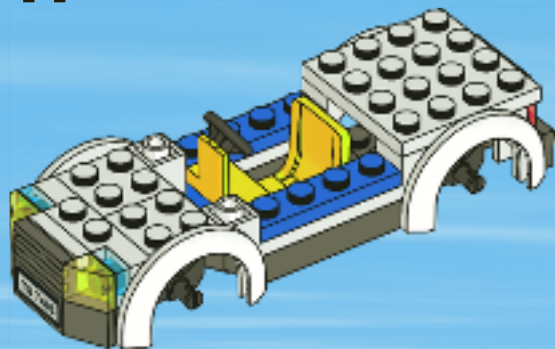 


12

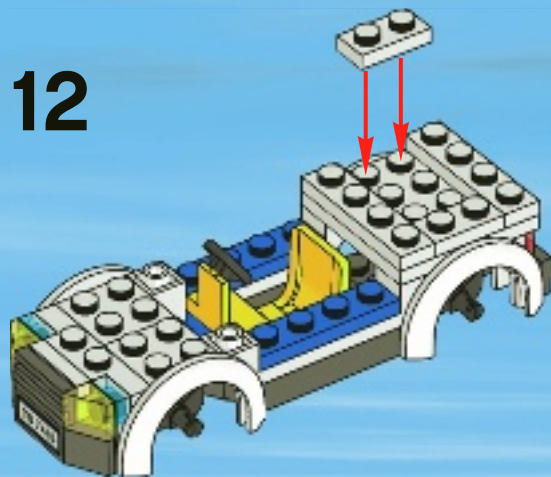 


13

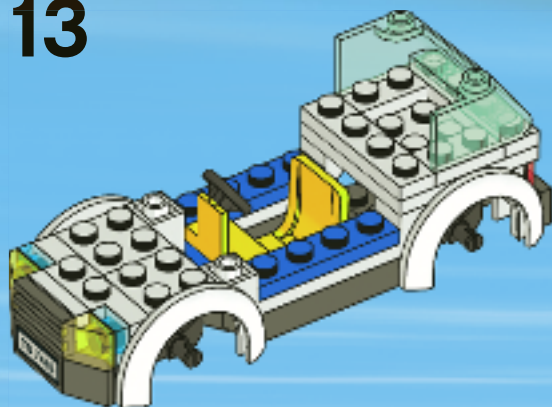 


14

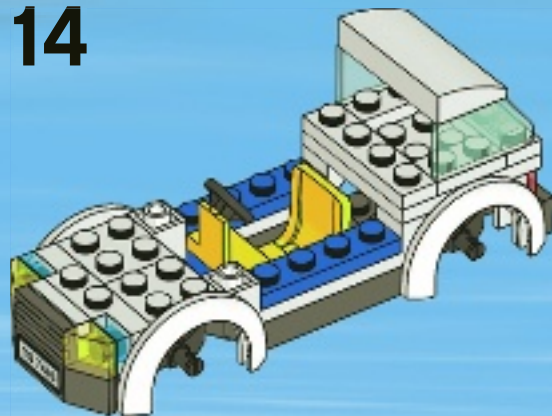 


1

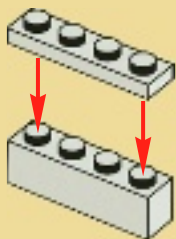 


2

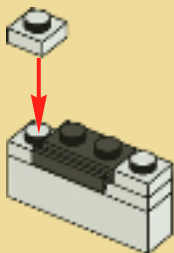 


3

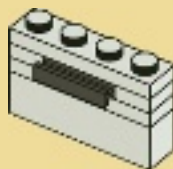 


4

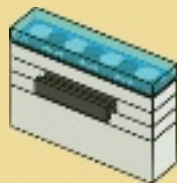 


15

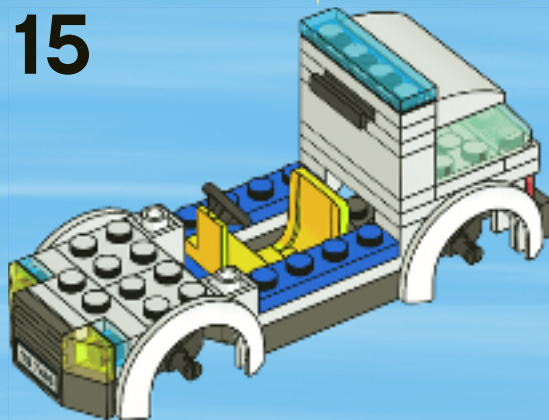 


16

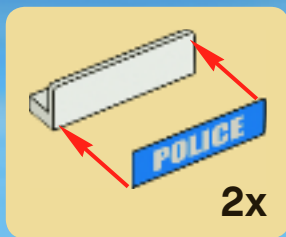 

17

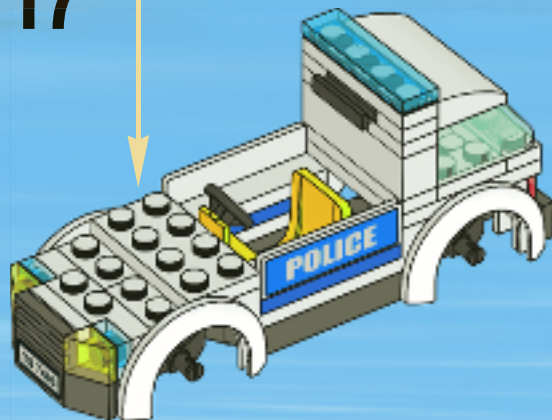 

18

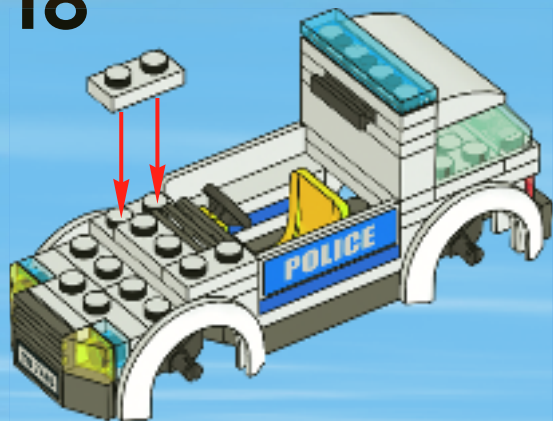 

19



20



 
21



22



23

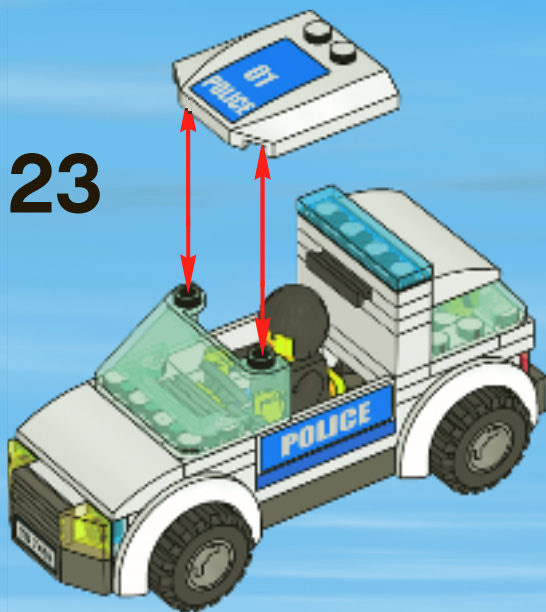



CITY



7279



7285



7286



7287



7288



7498

LEGO CITY



3365



3366



3367



3368



www.LEGOclub.com



LEGO Club Email



LEGO Club Magazine

LEGO club™

FREE! GRATIS! GRATUIT!



www.LEGO.com

SIGN UP ONLINE!

www.LEGOclub.com



00800 5346 5555*



1-866-534-6258 • 1-877-518-5346

US & Canada only

One-time enrollment

- * Freephone. Mobile charges may apply.
- * Numéro sans frais. Des frais peuvent s'appliquer avec les téléphones cellulaires.
- * Gebührenfrei. Kosten für Anrufe aus Mobilfunknetzen können abweichen.
- * Gratis telefoonnummer vanaf vaste lijn.
- * Det er et gratis nummer, når du ringer fra fasttelefon.
- * Det är gratis, när du ringer från en fast telefon.
- * Numéro sans frais. Des frais peuvent s'appliquer avec les téléphones portables.